



Canlarriz®



Digital Signage Display Instruction Manual

CONTACT US

***Ready to claim your reward ?
Simply connect with us through Any of these channels***

Mobile Phone

+86 18118766247

Landline

+86 400 900 2860

Email

Tina.cen@evision-display.com

Ins/Facebook

Canlarriz Digital Signage displays

Website

www.canlarriz.com



**User Guides
On YouTube**



**Add Customer
Service On WhatsApp**

Catalogue

01

Important Information and Safety Cautions

02

Remote Control Instructions

03

Basic Operating Instructions

19

USB Driver Content Publishment

20

Mobile Phone Content Publishment

22

PC Content Publishemnt

29

Product Catalog

IMPORTANT INFORMATION AND SAFETY CAUTIONS

1. Please read the instructions carefully before using and keep it for future reference.
 2. installing the device on stable place in case of falling and injuries, especially for children. When mounting the device on a wall, be sure to install the product according to the method recommended by the manufacturer. This is a safety issue.
 3. Keep the product away from high temperature and humidity environment.
 4. Regular cleaning can prolong the service life of the machine. Before cleaning, be sure to turn off the power and unplug the power cord.
 5. The way to keep the screen clean and effective is to add a small amount of softener or cleaner in warm water, wet it with a soft cloth, wring it out and wipe it with it. If there is extra water on the screen, make sure it air drying before you open the machine.
 6. To remove dirt or dust from the machine case, wipe with soft, dry, flannelette. Be sure not to use wet cloth.
 7. If you want your machine to rest for a period of time, it is best to unplug the power to prevent any damage caused by lightning or radio waves.
 8. Do not use attachments which are not recommended by the manufacturer. Use of improper attach-ments can result in accidents.
- If machine need to repair, make sure the replacement the same characteristics and performance as the original parts. Use of unauthorized parts can result in fire, electric shock or other danger.
9. When damage requiring service, just unplug the power cord from the Ac outlet. Do not open the machine arbitrarily. If you have any questions, please contact the relevant customer service personnel or maintenance personnel.

CAUTION

1. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
2. This user manual includes detailed usage instructions for your product. Please read this manual thoroughly.
3. Figures and illustrations in this user manual are provided for reference only and may differ from actual equipment appearance.
4. Equipment design and specifications may be changed without notice.

Remote Control Instructions

 


Basic Operating Instructions


I.Power On

When the power is connected, you can turn on the device by pressing the power button on the remote control. Alternatively, reconnecting the power will also automatically turn on the device.

2.Device App Catalog

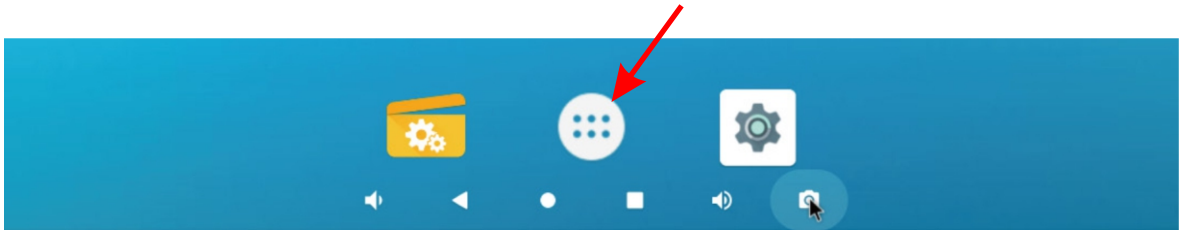

 Press the ⌂ button on the remote to enter the Home screen, then click ☰ to access the system application interface.

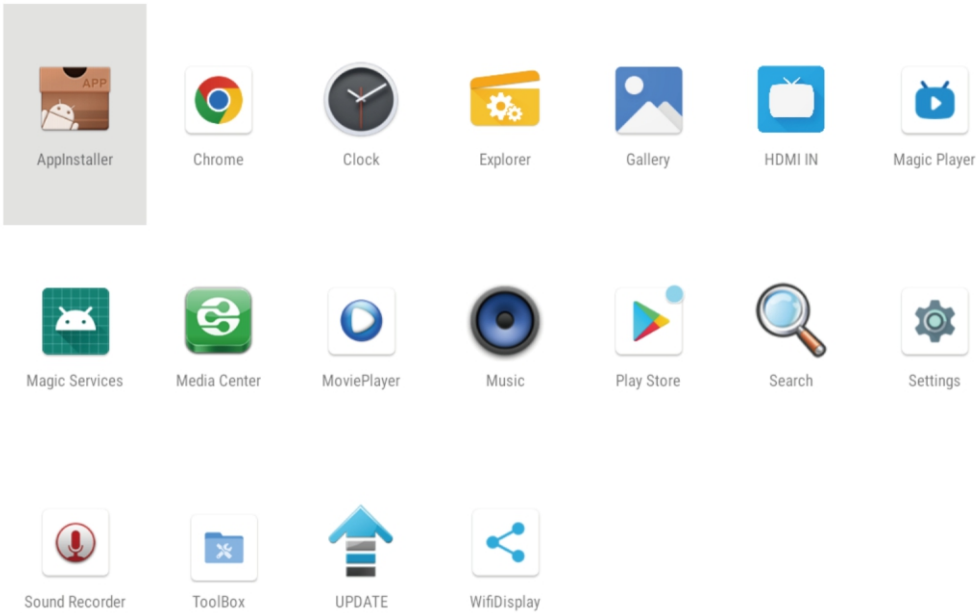

Explorer	For browsing and managing files on the device
Magic Player	Open magicplayer and play content
HDMI In	Change the input source to hdmi in
ToolBox	Set the screen orientation, set up automatic power on and off, and more
Play Store	Downloading and installing applications
Settings	System settings for adjusting preferences and configurations
ToolBox	Collection of commonly used tools and utilities
UPDATE	Used to check for and install system updates

3.How to use Magic Player system settings

There are three ways to enter the settings of the Magic Player.The First Method: Press the "⏮" button, then press the "≡" button on the remote control.

Second, use the **USB mouse** to click on the upper left corner or upper right corner of the screen 3-4 times in succession.

2025/8/5 06:14

Currently no program on the device,the following ways to send programs!

Send program via cloud platform

Step 1

Set the device to cloud networking mode

Go to the menu page, set the device to cloud networking mode in the system mode, and bind the relative server address and user. XiaoHui cloud server Address:
Domestic: <http://www.led-cloud.cn>
Overseas: <http://www.led-cloud.com>

Step 2

Login to the cloud platform

Open the server address in the browser, enter username and password to login to the cloud platform.

Step 3

Edit program

Create a program that matches the device, and add videos, pictures and other materials to the program.

Step 4

Send programs to the device

Send the programs to the relative devices, and then play them in the devices after the sending is completed.

Send program by APP

Step 1

Download the app

Scan the following QR code on your phone to download the Ledart

Step 2

Establish network connections

The phone connects to the device's Wi-Fi hotspot. Or both the device and the phone are connected to the same Wi-Fi network

Step 3

Edit program

Create a program that matches the device, and add videos, pictures and other materials to the program.

Step 4

Send programs to devices

Send the program to the relative devices, and then play them in the devices after the sending is completed.

Play program on standalone device

Step 1

Set up stand-alone mode

Enter the menu page, set up stand-alone mode in the system mode, set up the clip switching animation and time according to the requirement.

Step 2

Copy materials to U-disk or SD card

Format U-disk or SD card into FAT32 format and copy video or picture to U-disk or SD card.

Step 3

Insert U-disk or SD card

Insert U-disk or SD card into the device.

Step 4

Auto-play

The device will automatically play the clips in sequence based on the name of the clip on the U-disk or SD card.

972S-2C4-04C0F (MagicPlayer)
IP: 0.0.0.0 Server not registered successfully: Missing username, LAN mode:connected Enabled, Stand-alone mode Enabled

The third method is to use the mobile APP "**LedArt**" to connect the device, and then use the remote control in the device.

972S-FF-A7109

⏻

🏠

⏮

⏭

⏪

⏩

⏹

⏮

⏭

⏪

⏩

⏹

⏮

⏭

⏪

⏩

⏹

⏮

⏭

⏪

⏩

⏹

My device

972S MagicPlayer
972S-FF-A7109

Equipment status
Normal play

Screen
3840 x 2160

Firmware version
1.9.73.0

Capacity
10.51GB / 16.00GB

📶

⌚

🔒

Remote Time Device lock

🔄

⚙️

🔌

System Upgrade Settings Switch screen

📶

📺

⋮

Shake Empty the show More settings

📺

 
📺

⚙️


Program Device Settings

04


Then enter the settings interface as:

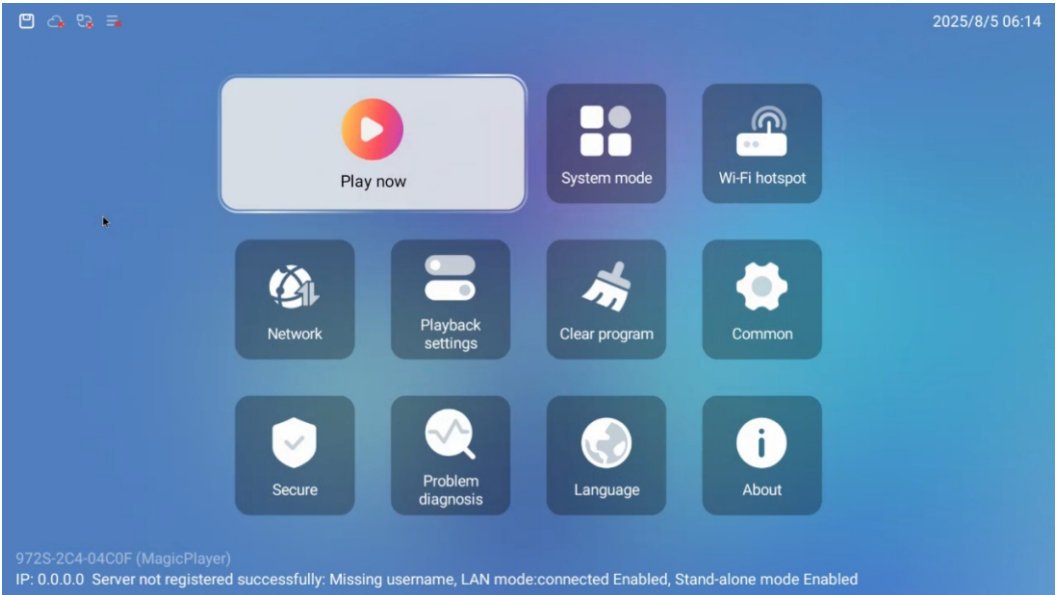

I.Network settings

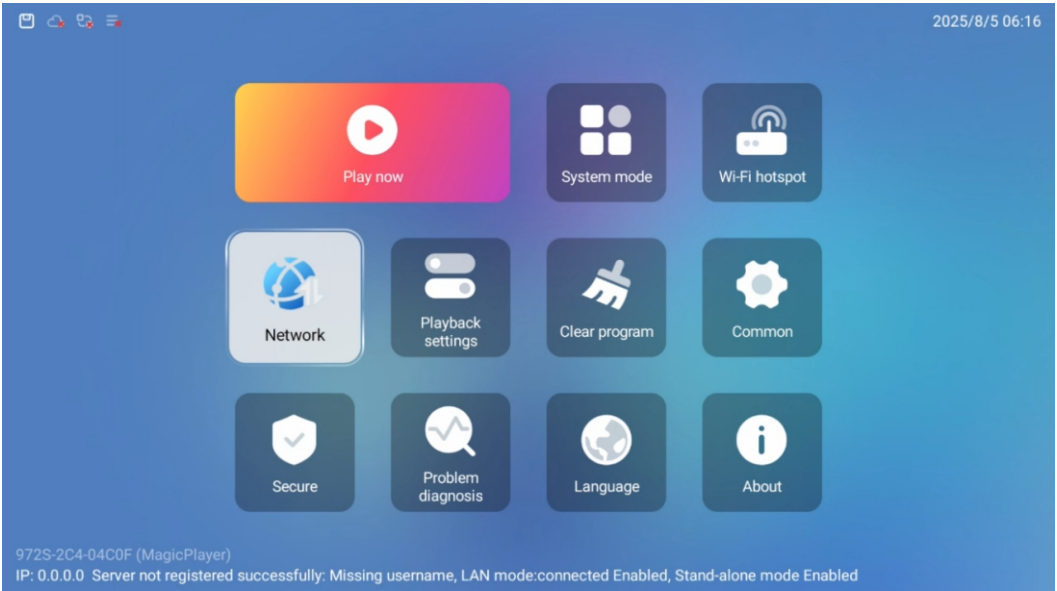 


 2.common

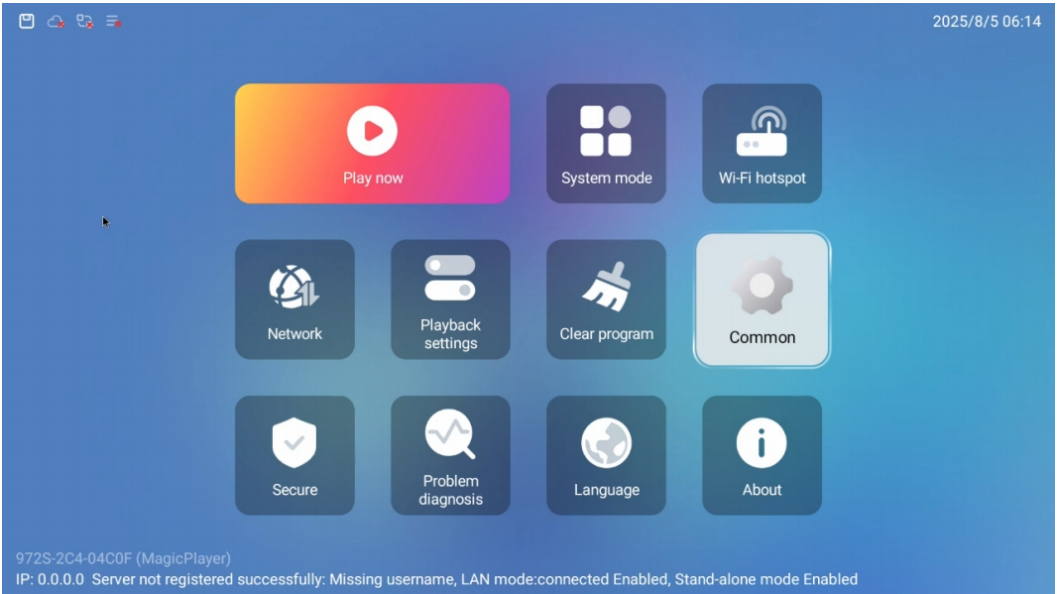

I) Brightness setting

 There are 2 modes in brightness setting, Timing and Default.

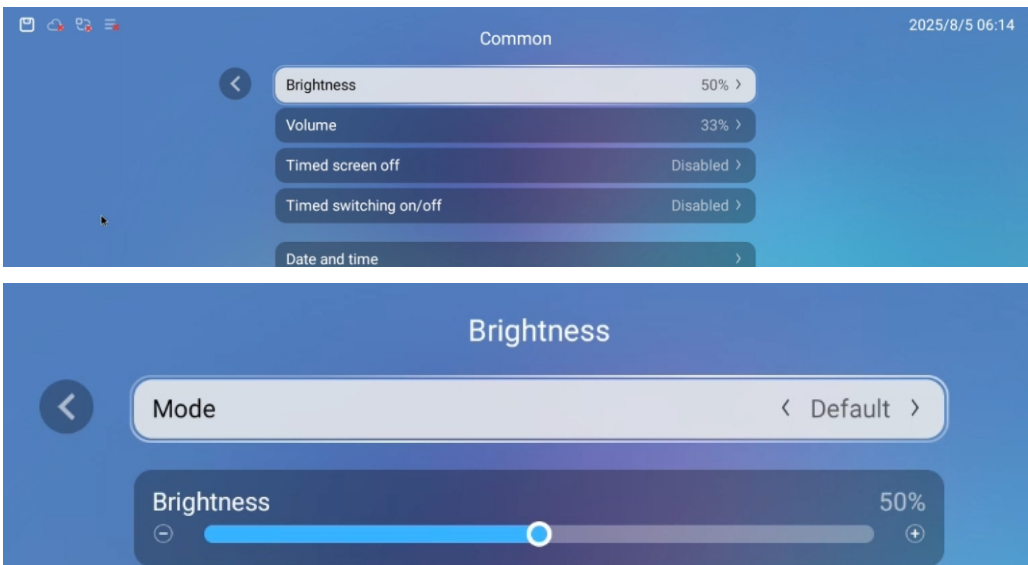


For the brightness time setting, once the time is set, the brightness can change automatically. As shown in the figure, the brightness is 63% from 04:00 to 08:00, and the volume is 80% from 04:00 to 08:00.



2) Volume

 There are two modes for volume settings Default and Timing.

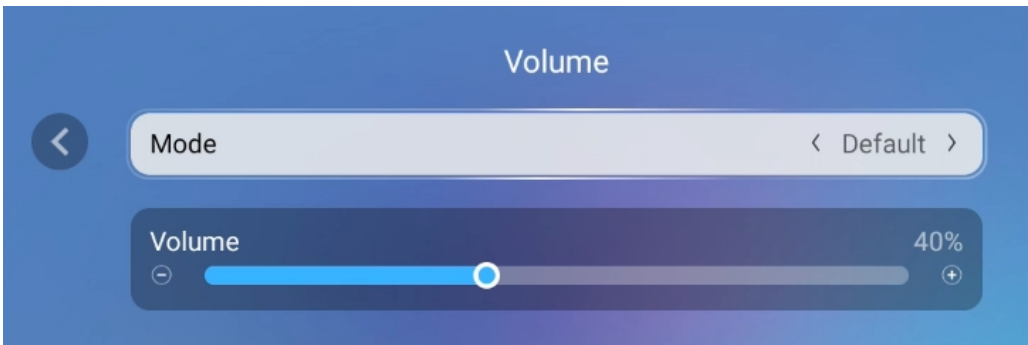


For the volume time setting, once the time is set, the volume can change automatically. As shown in the figure, the volume is 60% from 05:00 to 08:00, and 80% from 08:00 to 05:00.




3) Timer on/off screen

 Timed screen off has three modes: disabled, daily and weekly.

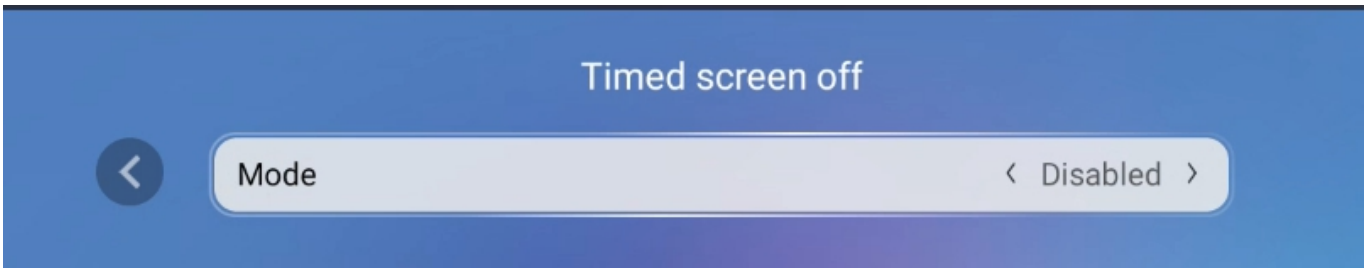

 Daily Mode is a daily automatic screen on/off program that repeats the screen on/off task every day.

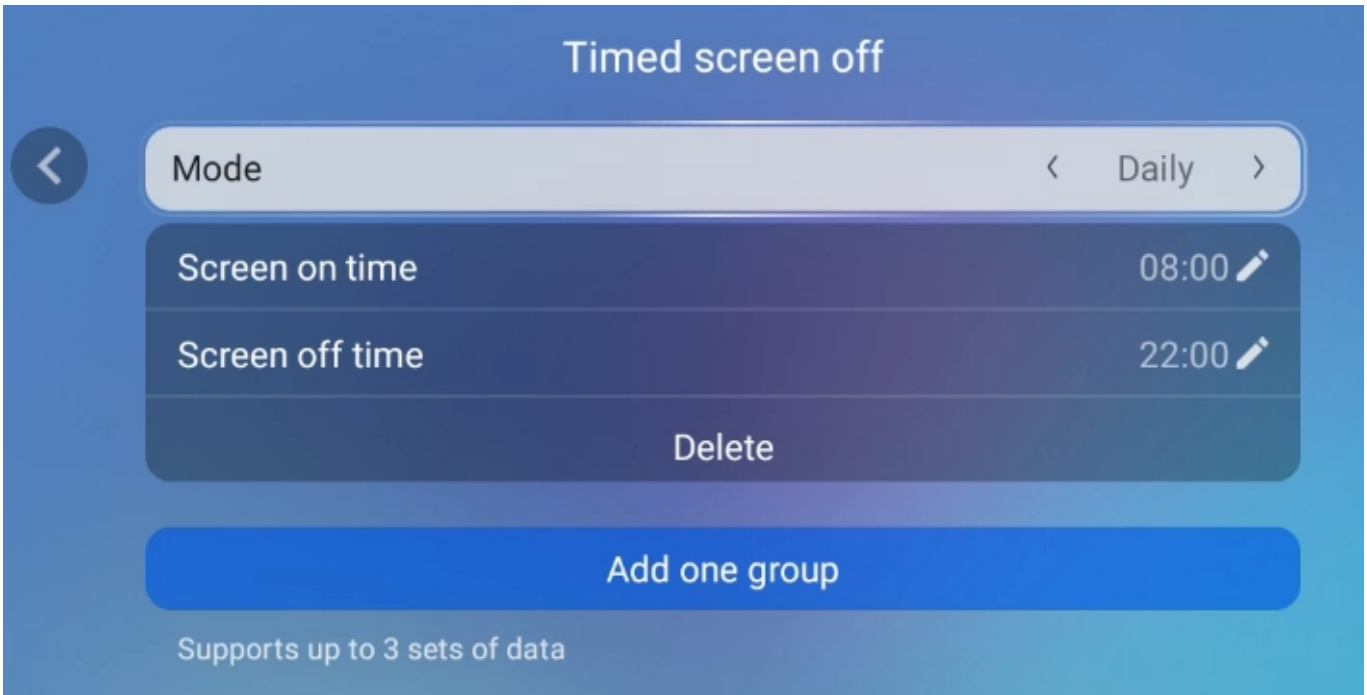


Weekly Mode divides the week into seven days, and each day can be designed with a different on/off screen time.




4) Timed switching on/off

 
Timed switching on/off has three modes: disabled, daily and weekly.

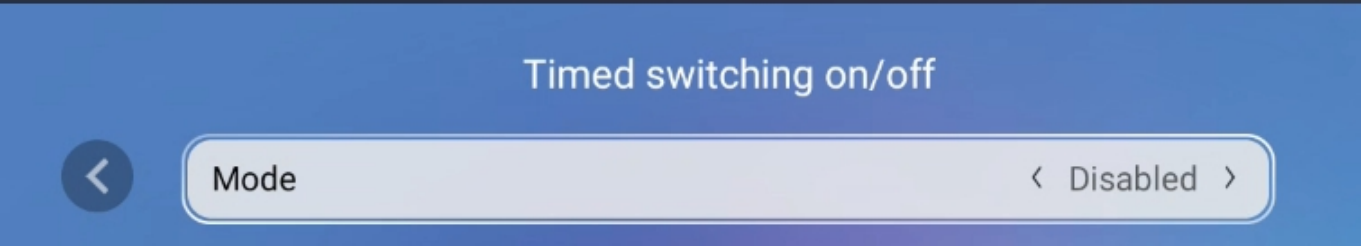

 Daily Mode is a daily automatic switching program that repeats the advertiser switching task every day.

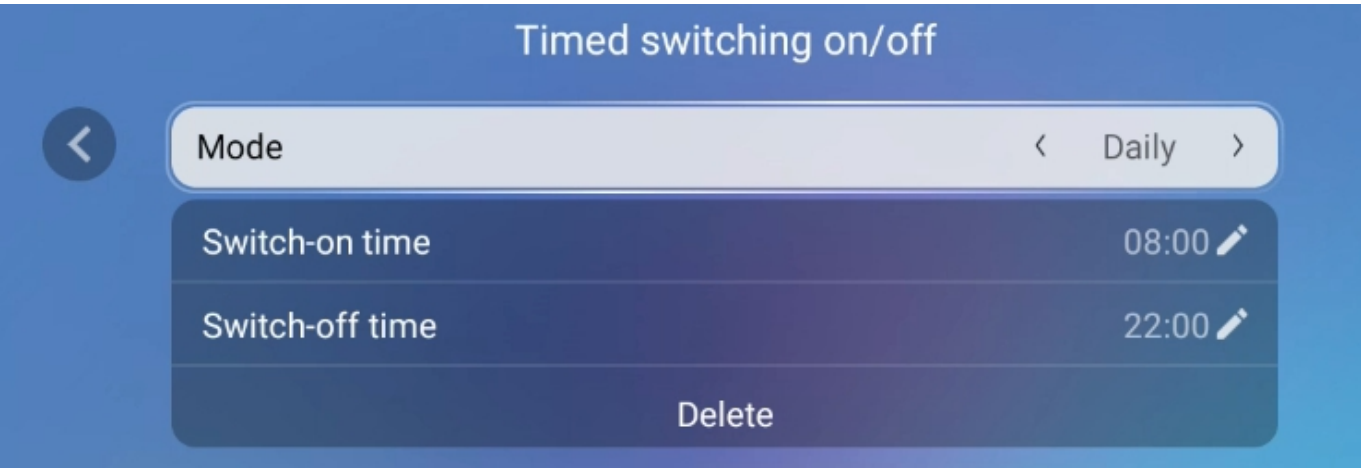


 Weekly Mode divides the week into seven days, Different machine on/off times can be designed for each day.

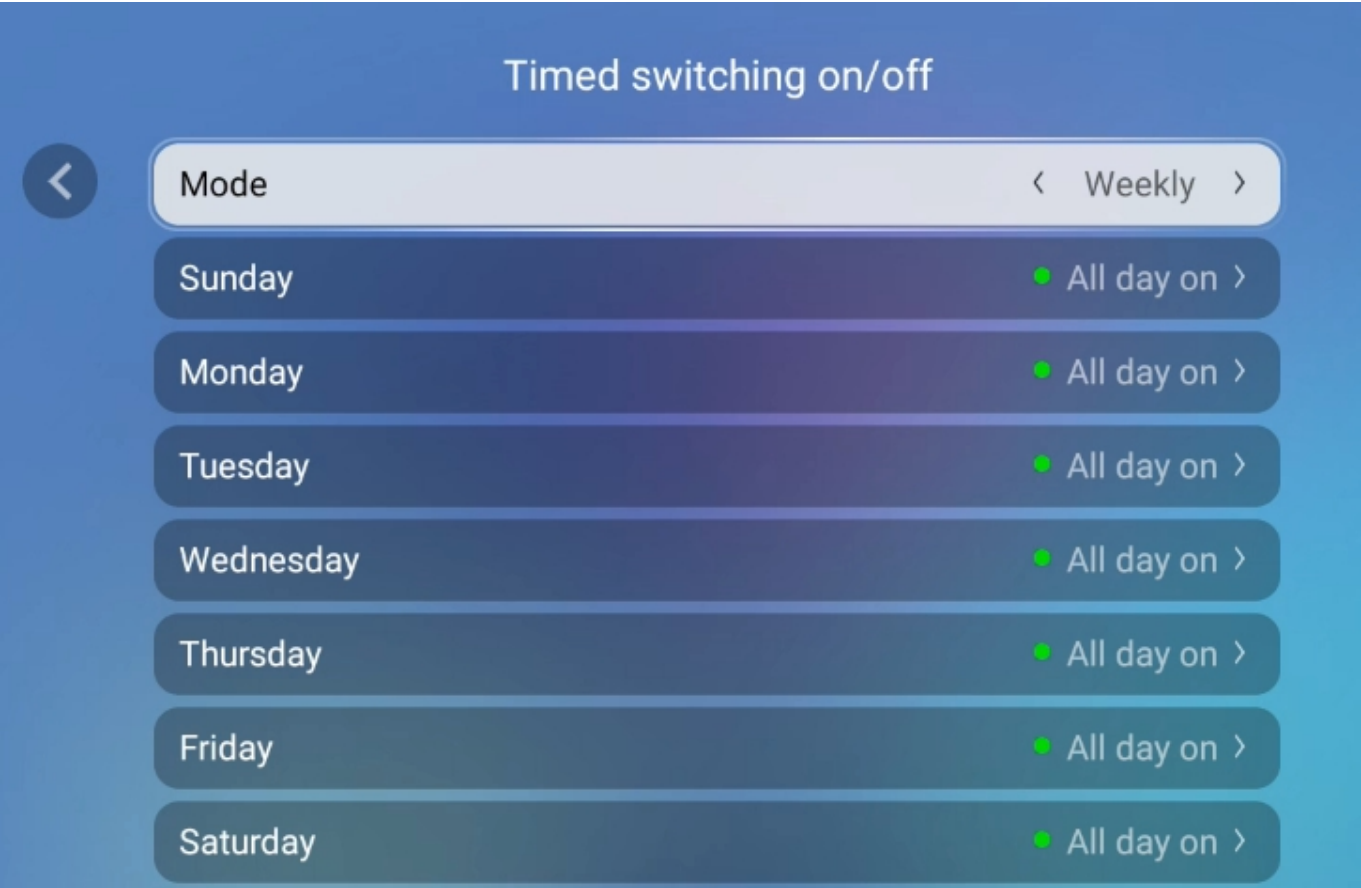


5) Time settings

 NTP time calibration can be turned on, or you can enter the desired date and time yourself.

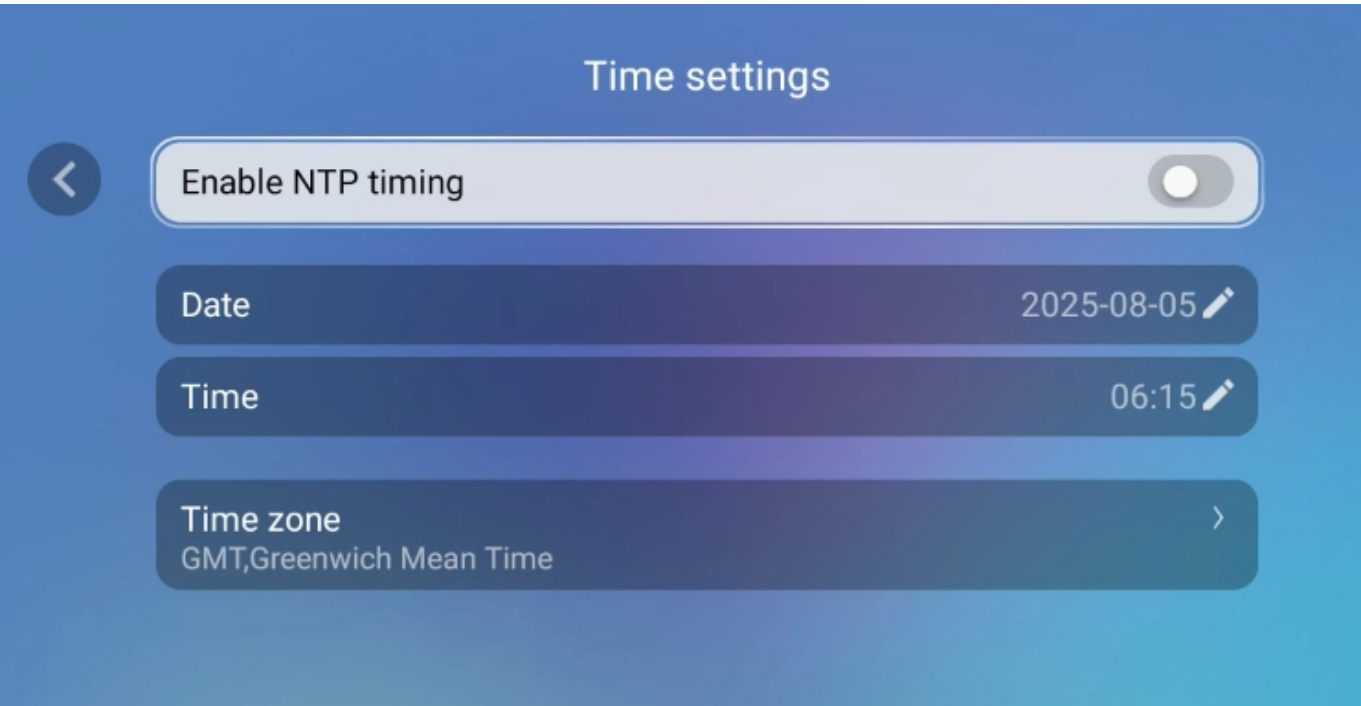


6) Screen rotation

 Can be rotated at 90°, 180°, 270° or adaptively with Adaptive.

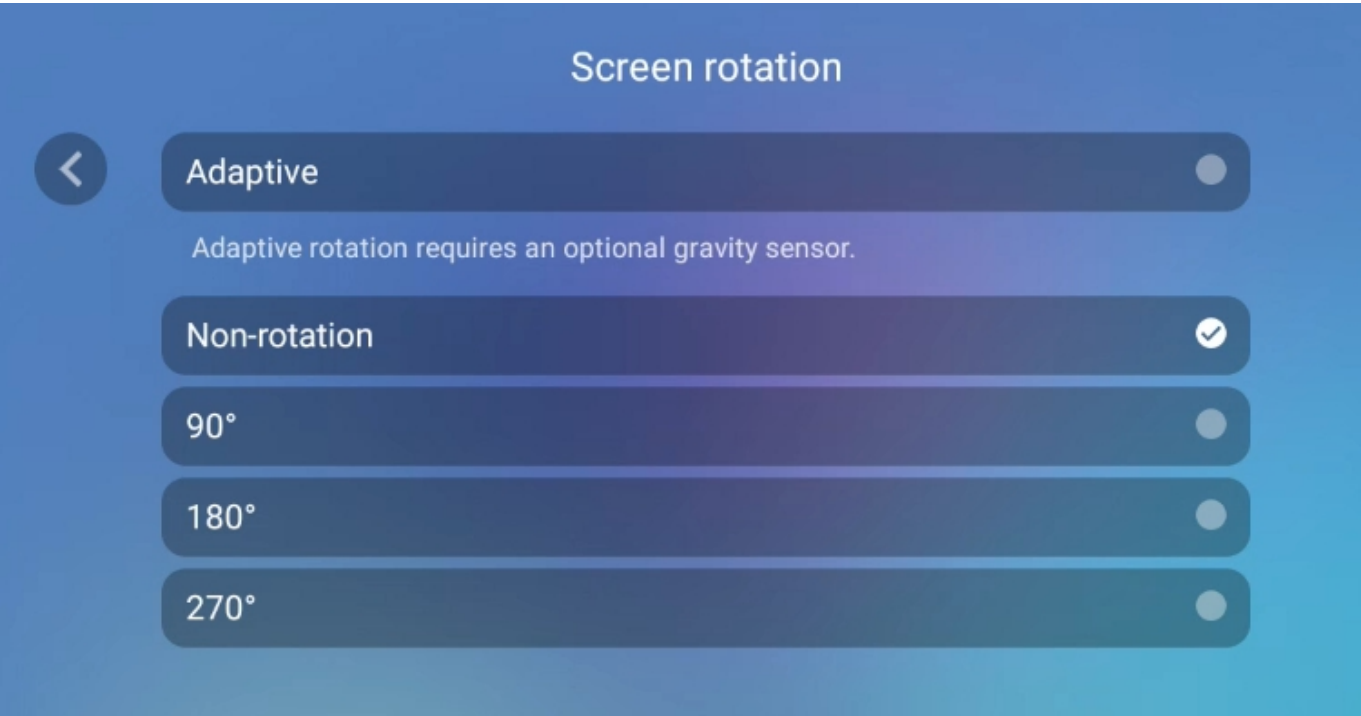


7) Display density

 
Display Density The larger the Display Density value, the sharper the image.

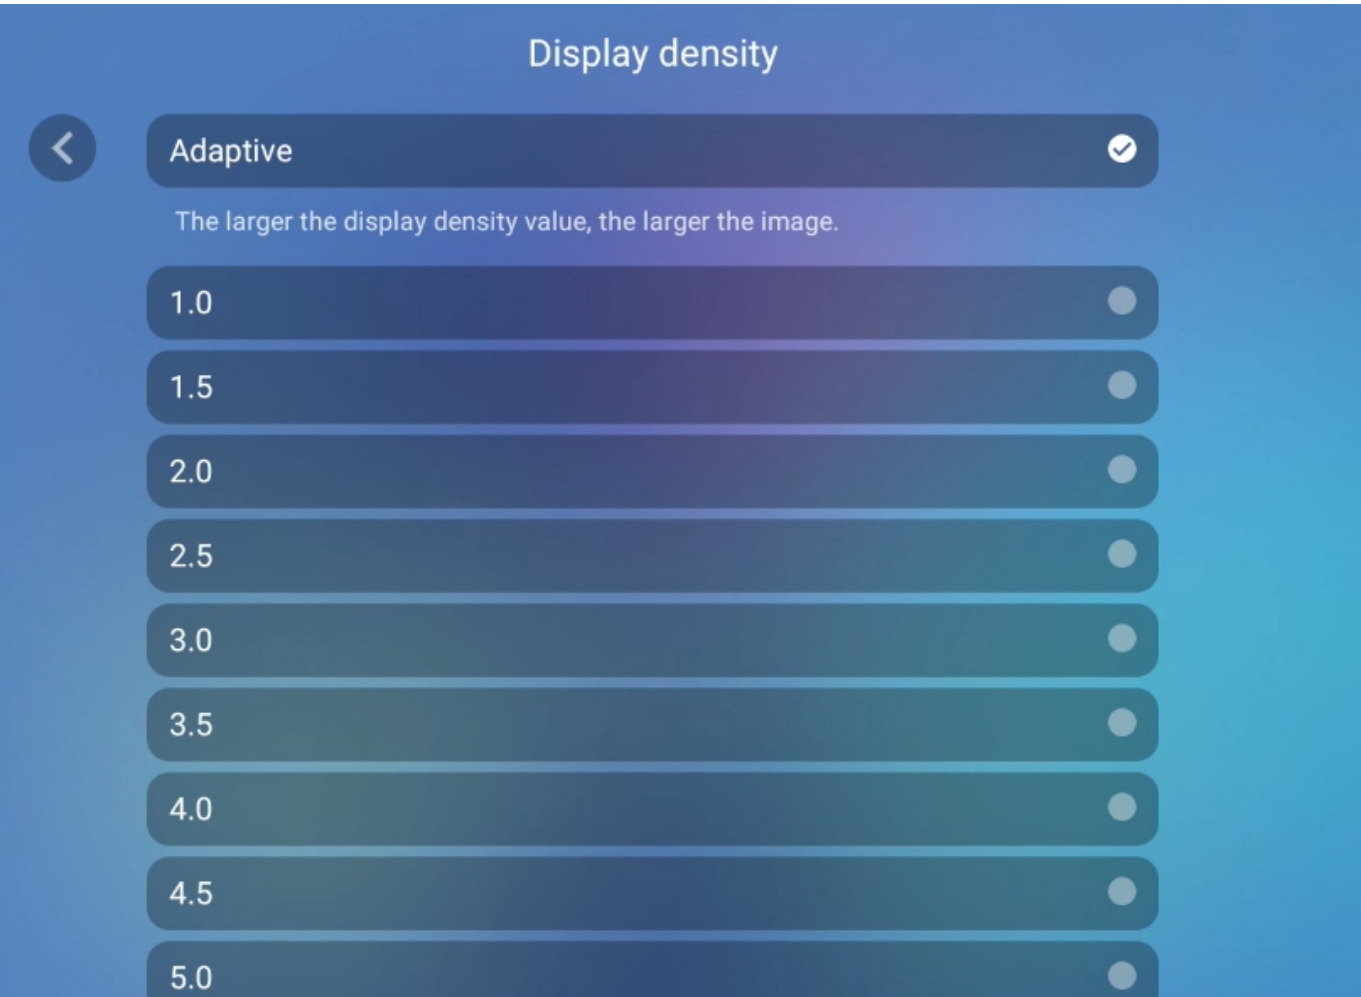

 8) Central control

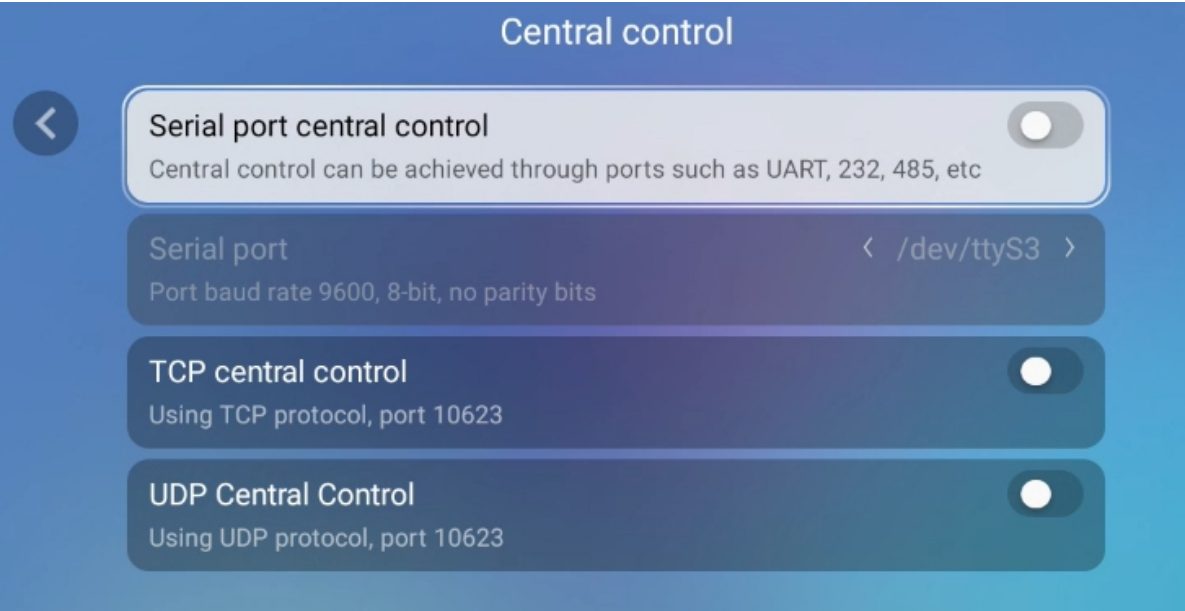


 9) System reboot and One clickcloning

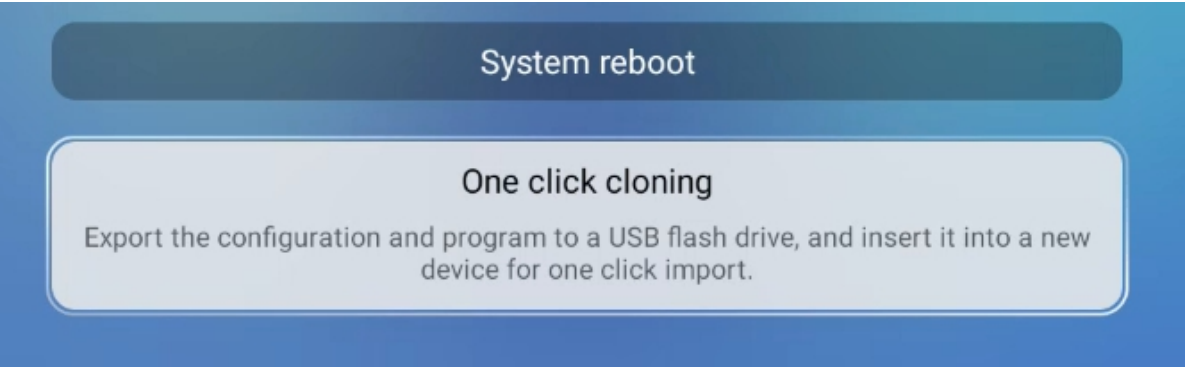


3.Clear program

 Click “Clear program” and a pop-up window will appear, click confirm to clear the program.

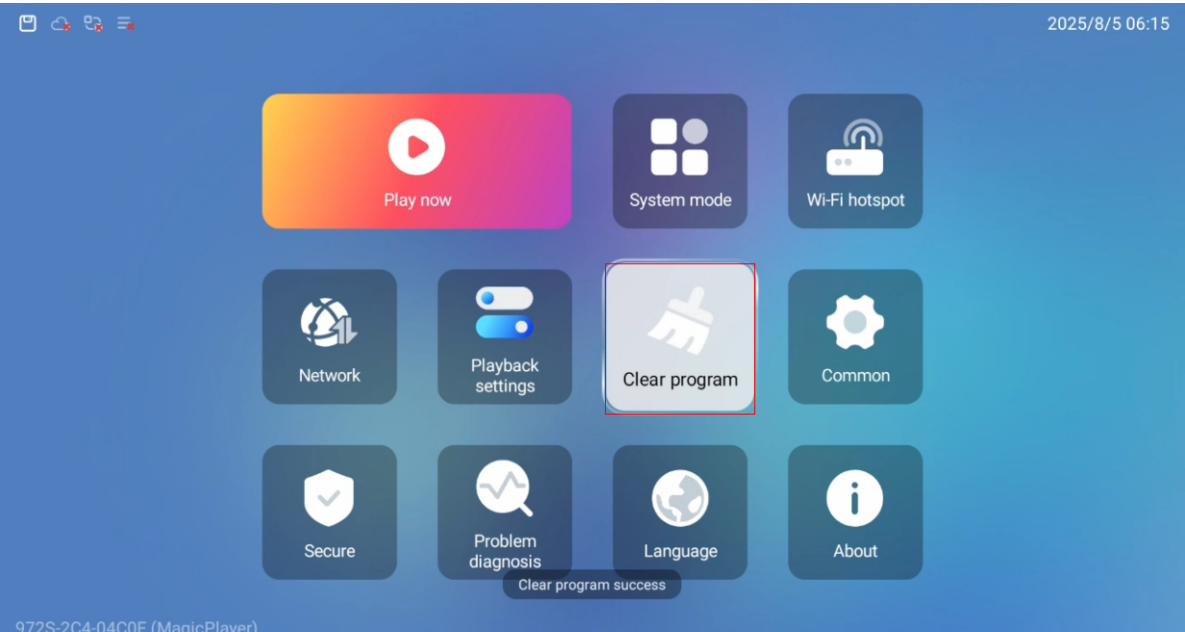


 4.Playback settings

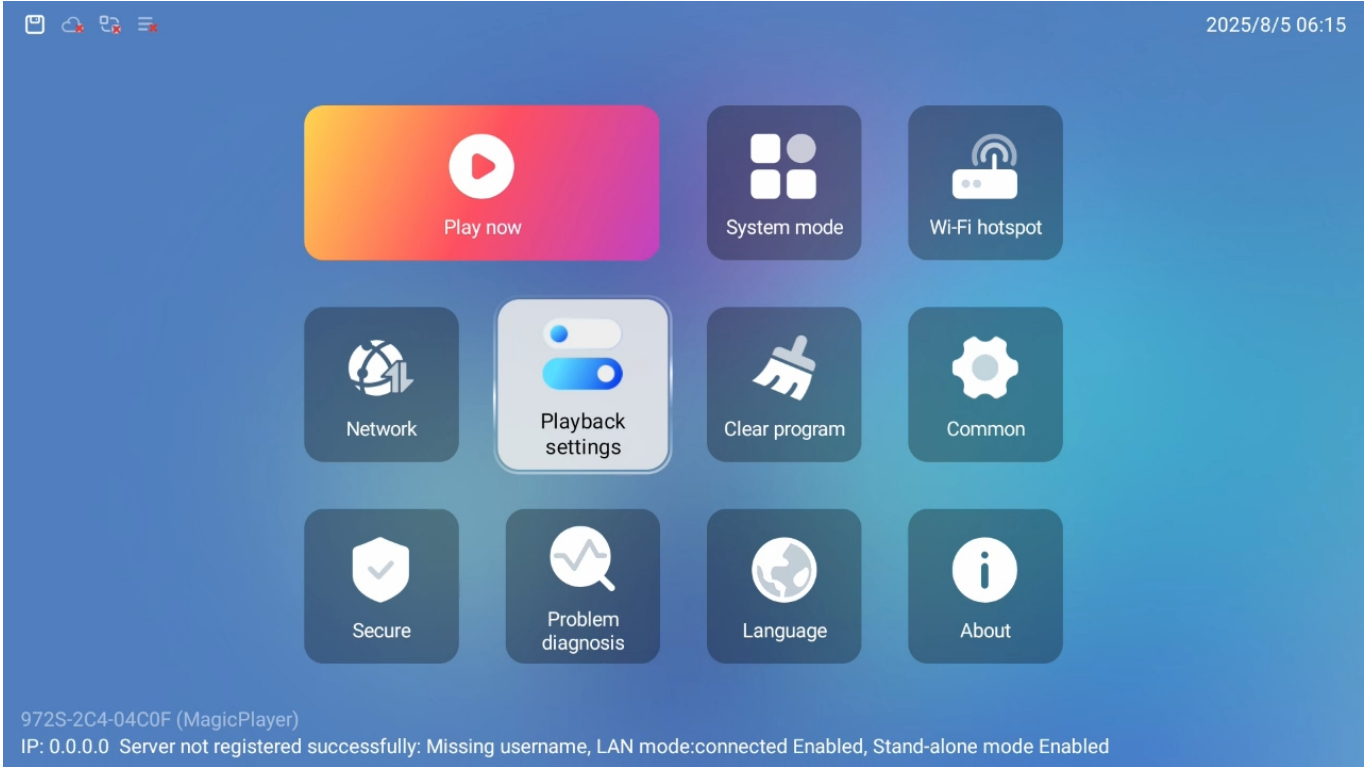


I) Storage location

 Storage location has three modes: SD Card, USB and Memory.

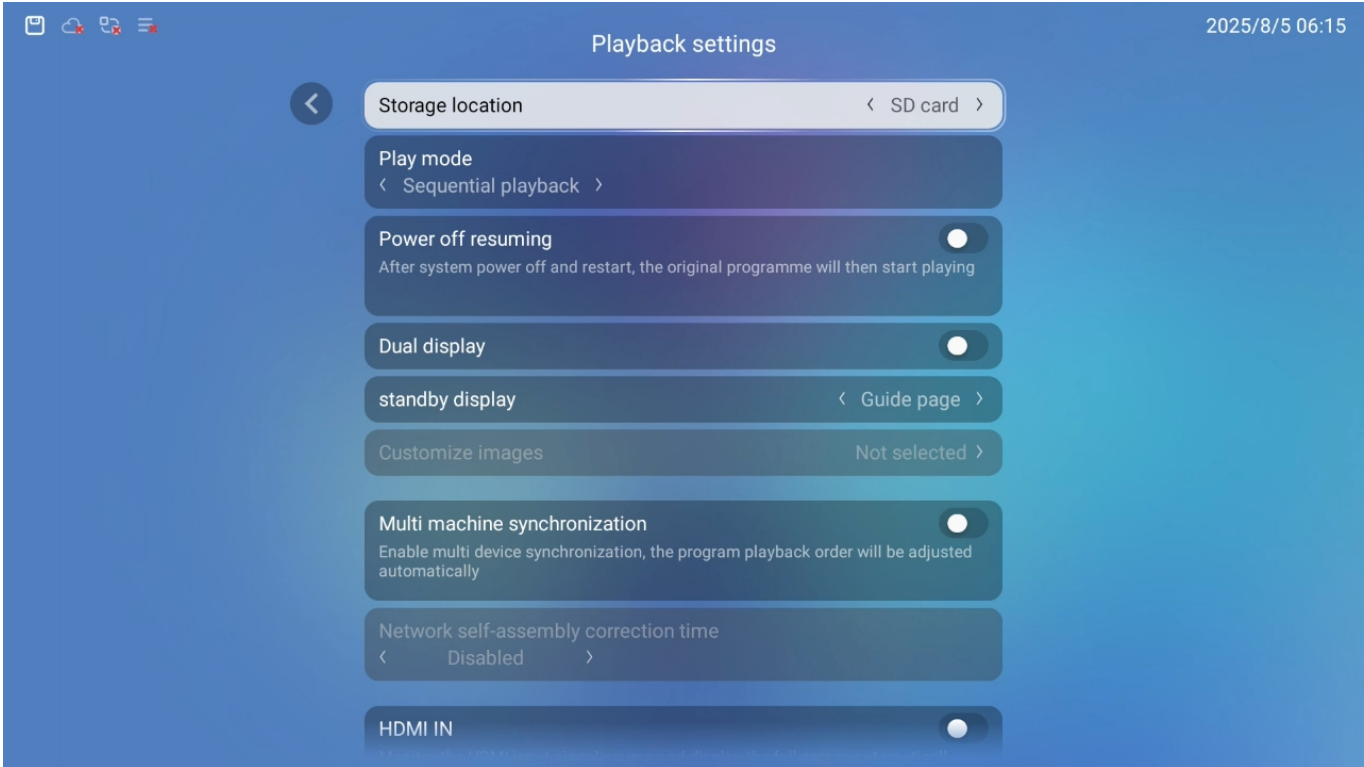


2) Play mode

 Play mode has three modes: Sequential playback and single program loop.




3) Power off resuming

 After system power off and restart, the original programme will then start playing.

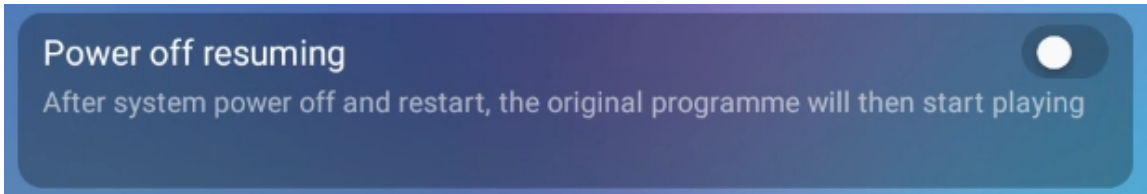

4) Dual display

 Connect two display devices so that they show different content respectively.




5) Standby display

There are three options None、Guide page and custom.




6) Multi machine synchronization

 Once turned on, you can set up multiple devices to play the same content.

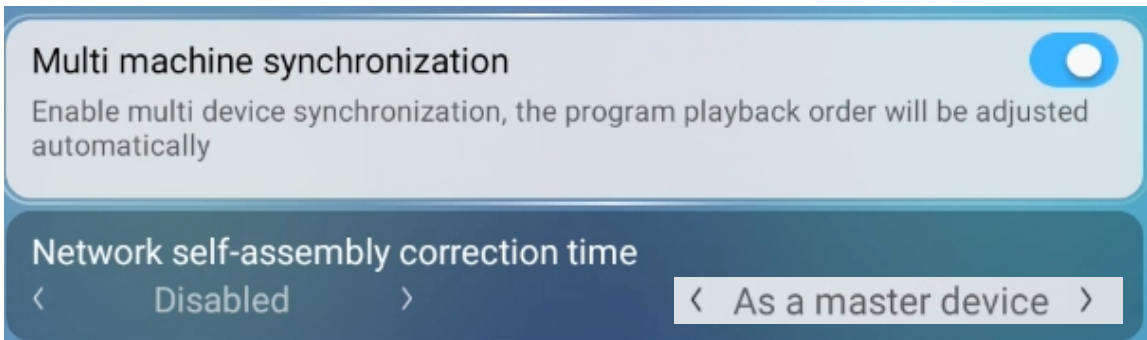



7) HDMI IN

 Monitor the HDMI input signal source and display the full screen automatically.

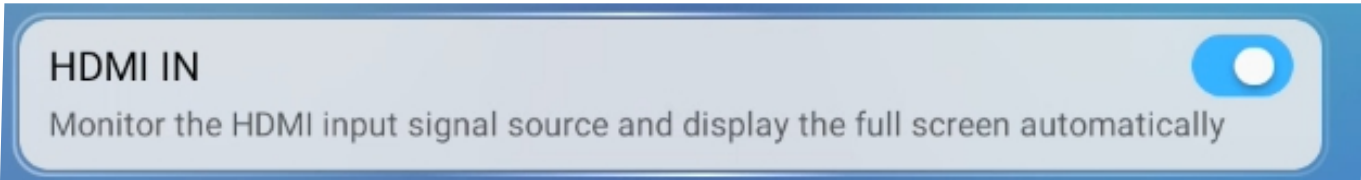


5.Network

  In the network settings, there are Wi-Fi, Wi-Fi hotspot, mobile network, local area network (LAN), and network detection.

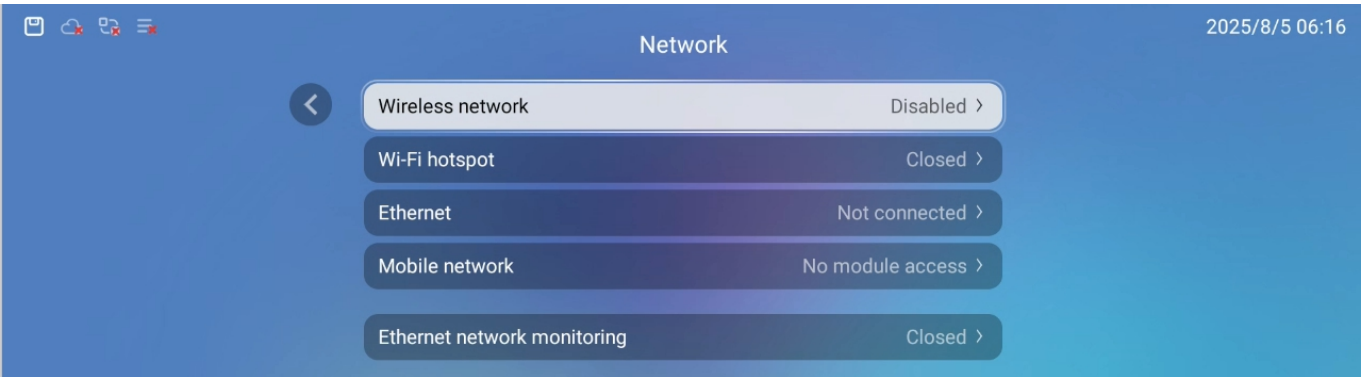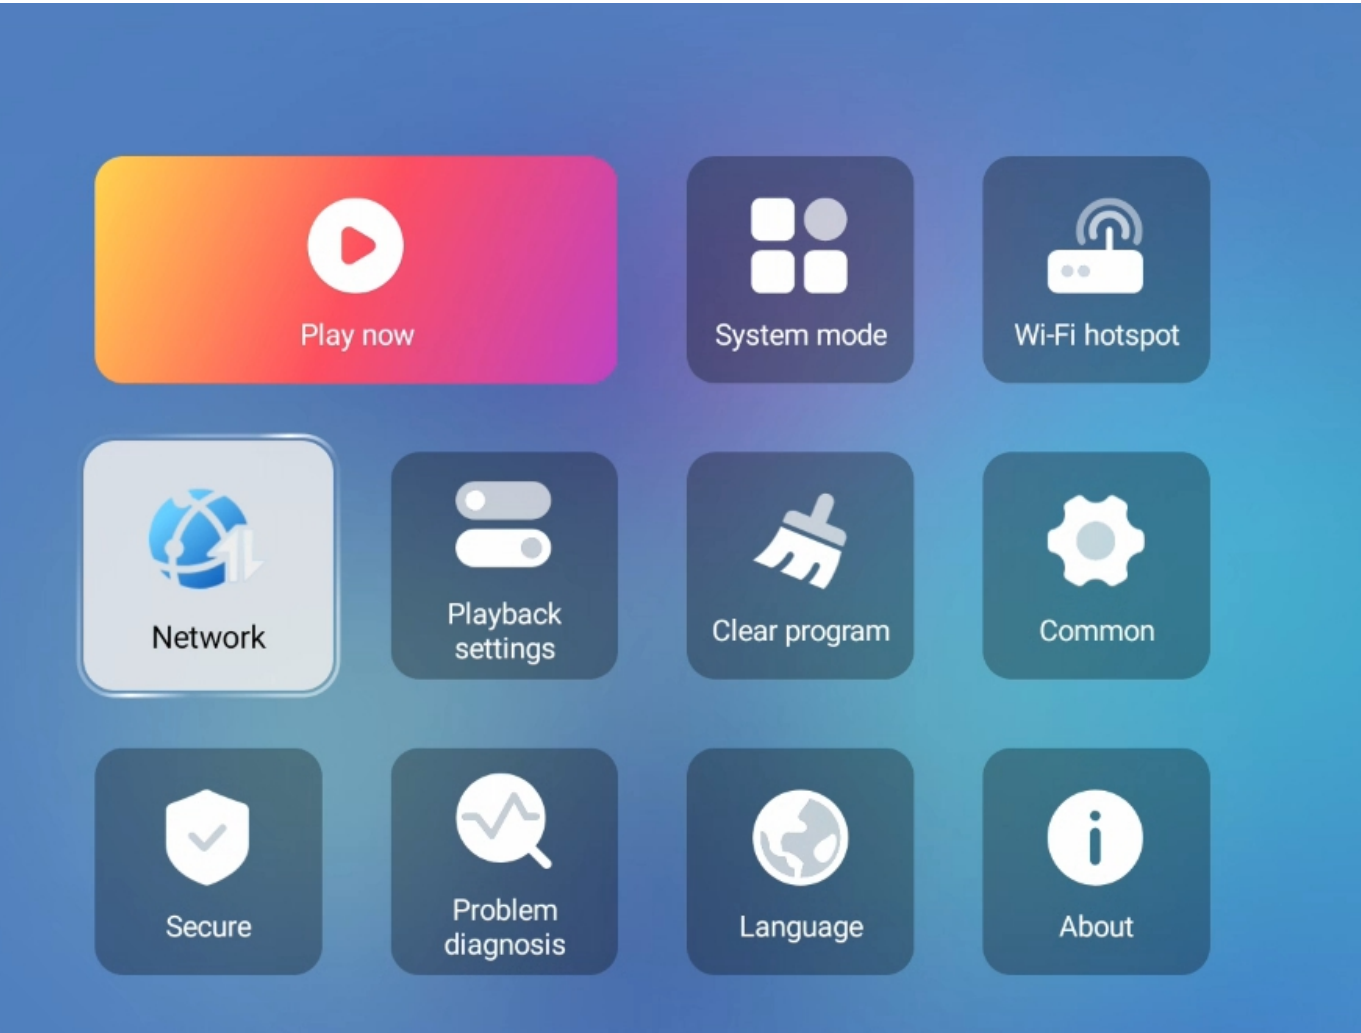

1) Wireless network

 After being turned on, it can connect to Wi-Fi.

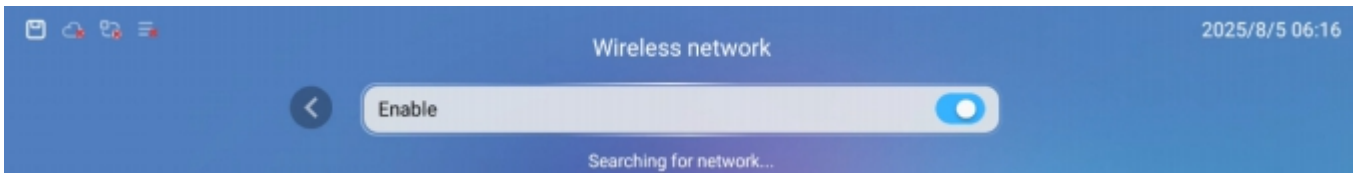


2) Wi-Fi Hotspot

When the device hotspot is turned on, you can view the hotspot information and change the hotspot password, etc.




3) Ethernet

 After being turned on, if there is a local area network (LAN) connection, the detailed information will be displayed here.

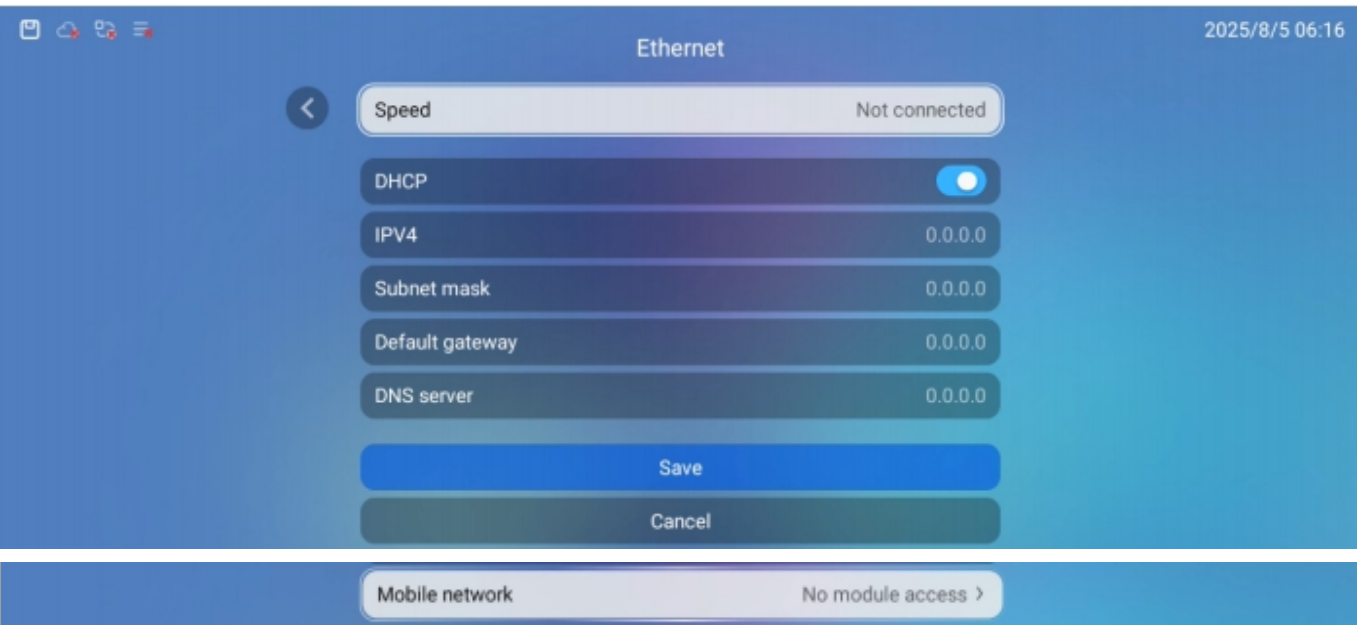


4) Ethernet network monitoring

 After being turned on, it can check the device's network and view other information.

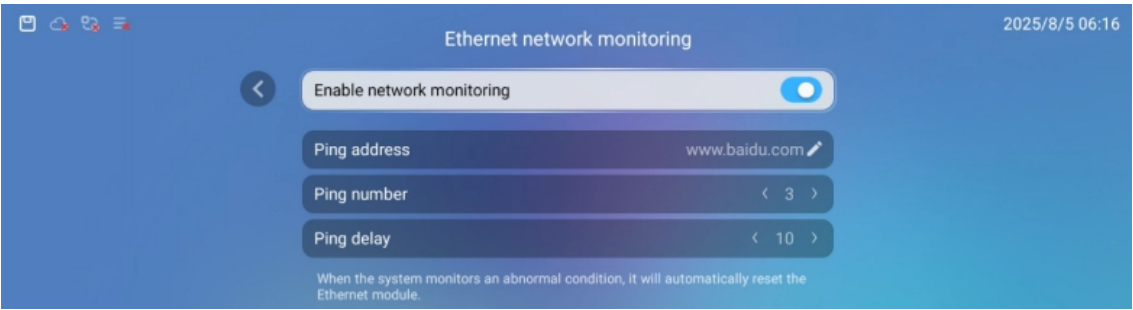


 6.System mode

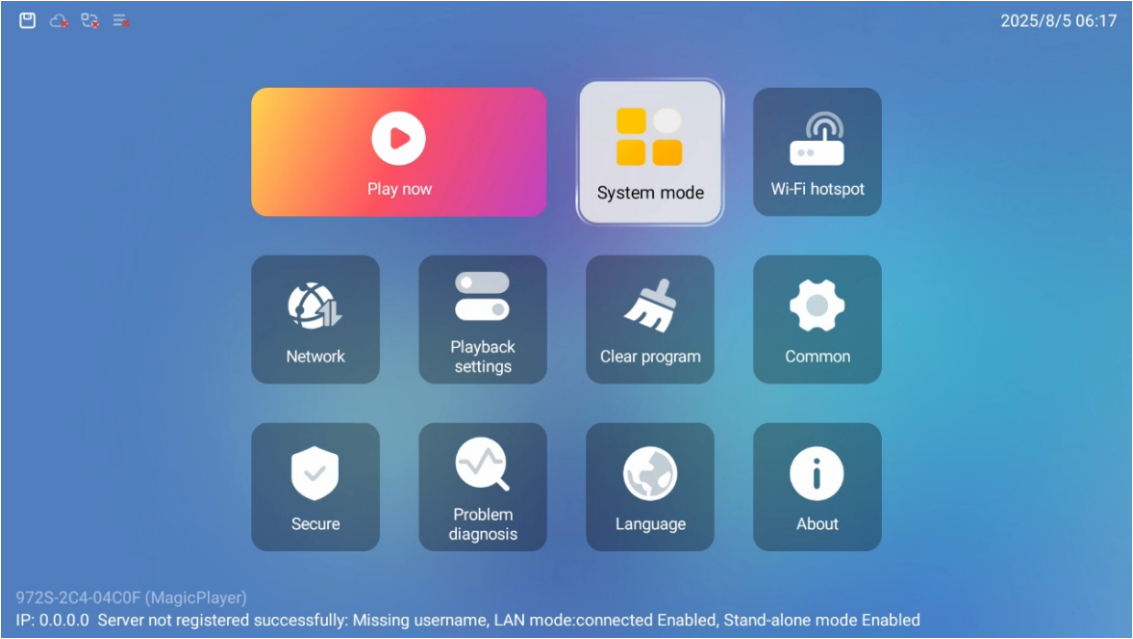


I) Cloud networking

 After being turned on, the device enters the networking – mode. By entering the information – publishing website and the corresponding user name, it can connect to the network and publish content.

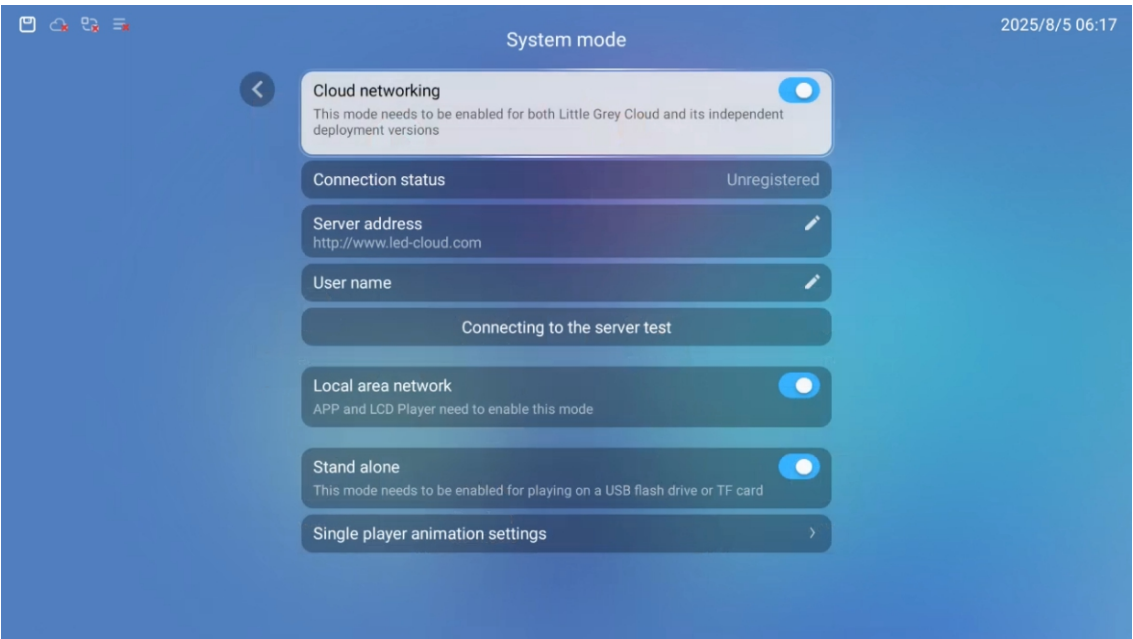


2) Local area network

 After the LAN port is successfully connected, you can use the LCD and Magic Player to access the device.




3) Stand alone

 This mode needs to be enabled for playing on a USB flash drive or TF card.

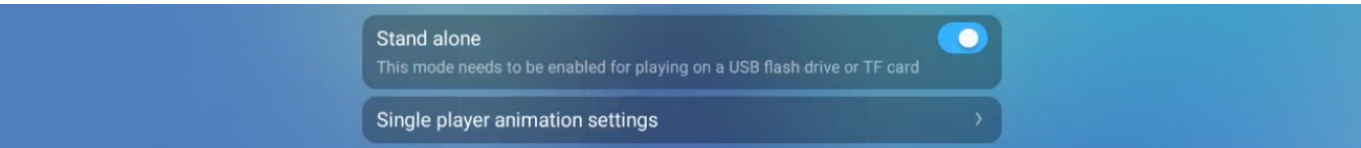


4) Loading mode

 here are two loading modes: copy and extend.

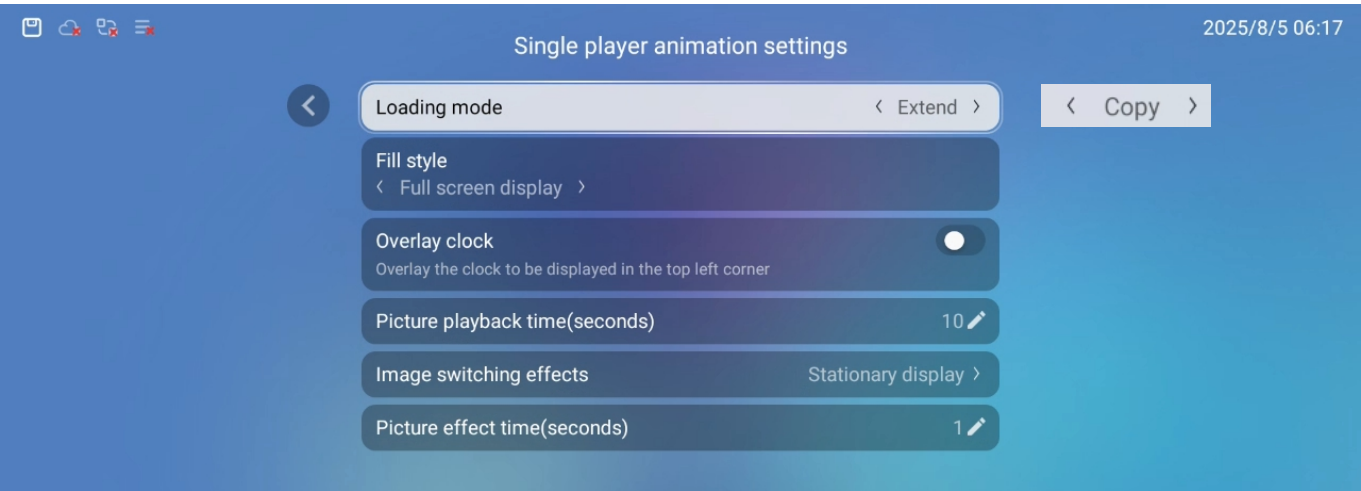


5) Fill style

 There are two types of filling styles, Equal ratio scaling, Full screen display.

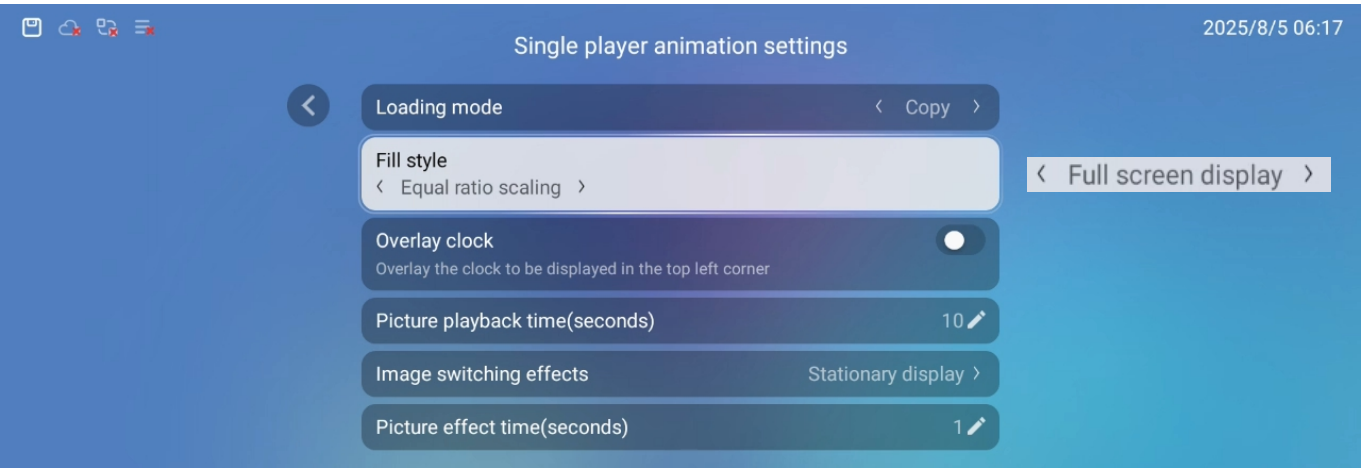

7.Secure

 After it is enabled, the device can be configured Enable security lock and Remote control encryption

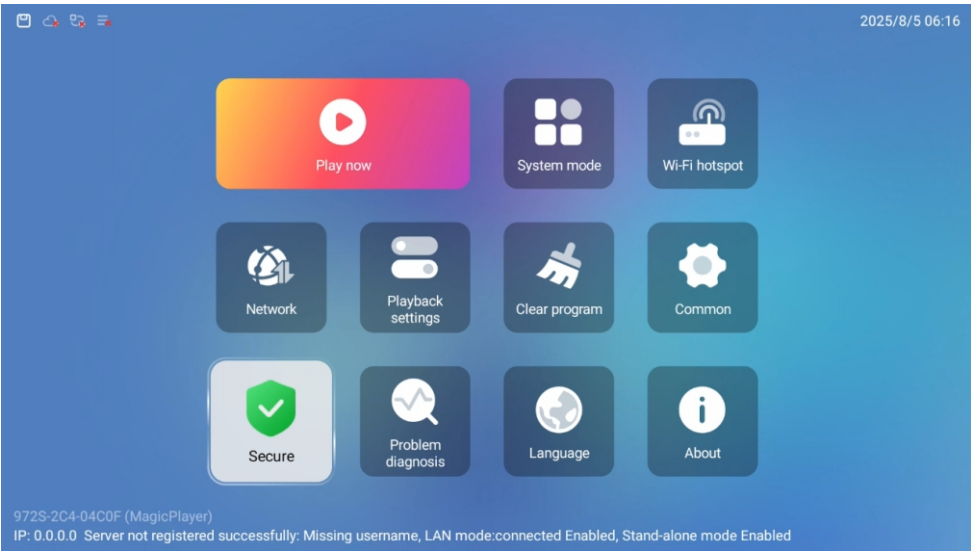


1) Remote control encryption

After it is enabled, the device can be locked, and a password is required to perform operations.




2) Remote control password

 
Click here to set the password.

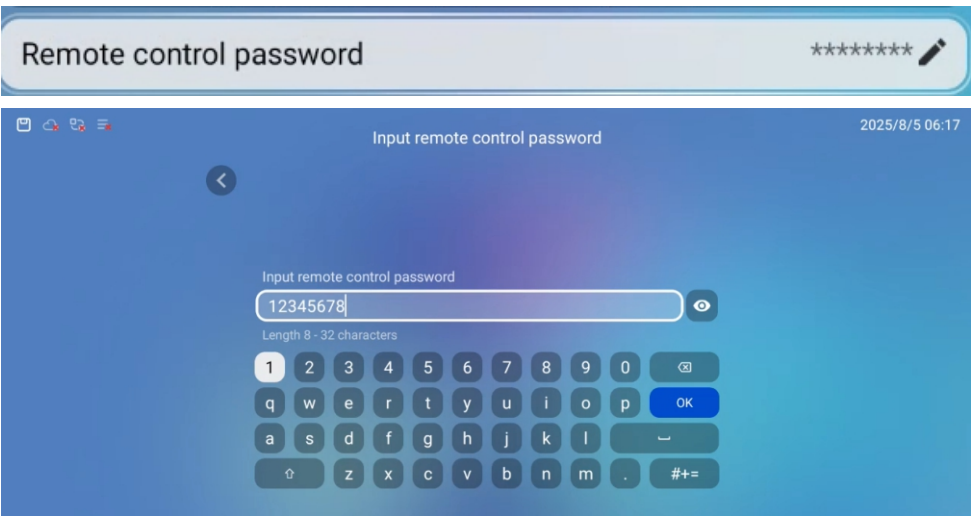

 8.Problem diagnosis

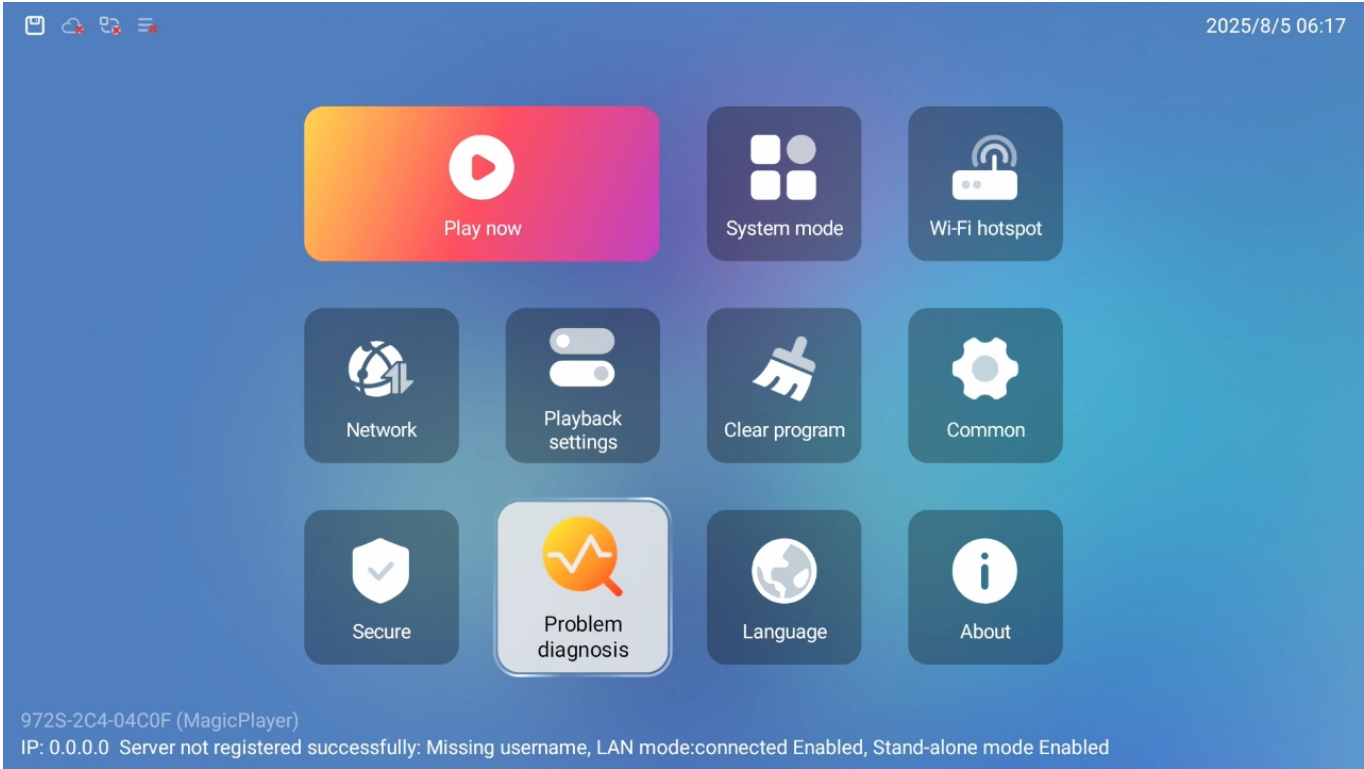

 Clicking on it will start checking for various issues with the device.

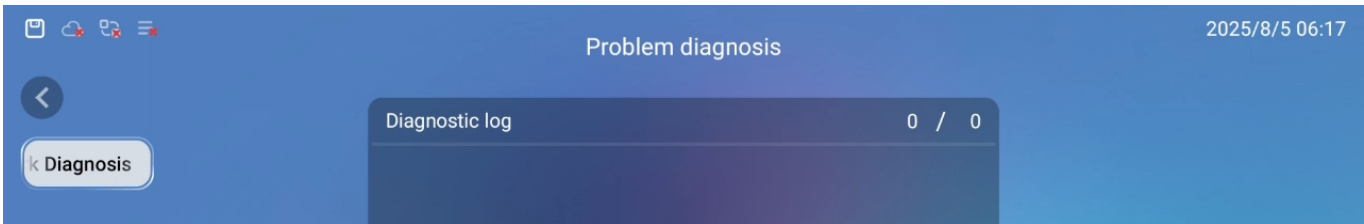


9.Wi-Fi hotspot

Like mobile phones, Wi-Fi hotspots are turned off by default; turn on the hotspot, and the phone can discover the device's Wi-Fi hotspot (the name of the Wi-Fi hotspot starts with the device model, such as 972S, 3566S...)



10.System language

 You can change the language of Magic Player.

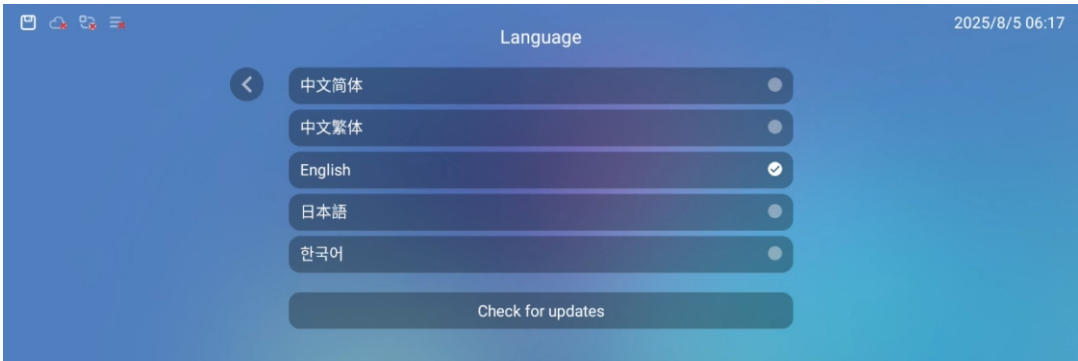


11.Play now

Exit settings and play the program.

12.Network diagnosis

 If your device is connected to the Internet, but cannot get online or connect to the server, you can check it here and analyze the reason.

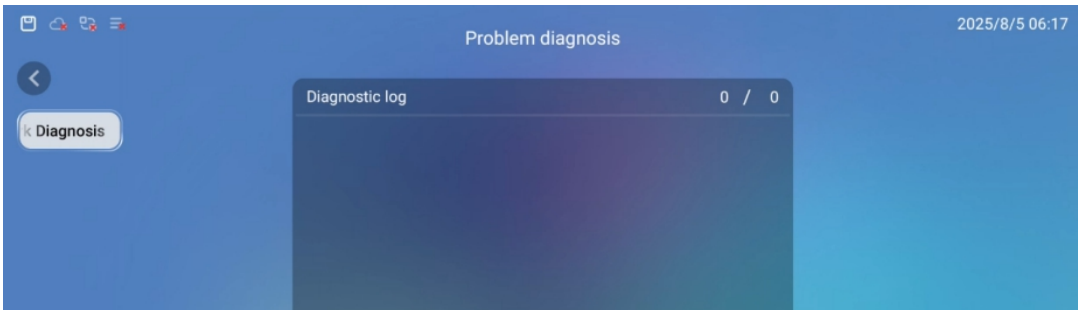


13.About us

About the system information, you can view the Android system version, MCU version, firmware version, resolution, MAC address and other information.



USB Driver Content Publishment

 Remote control: Enter the "magic player"  interface and press the "  " key.
USB mouse: Enter the " magic player"  interface and quickly click three times in the upper-left corner

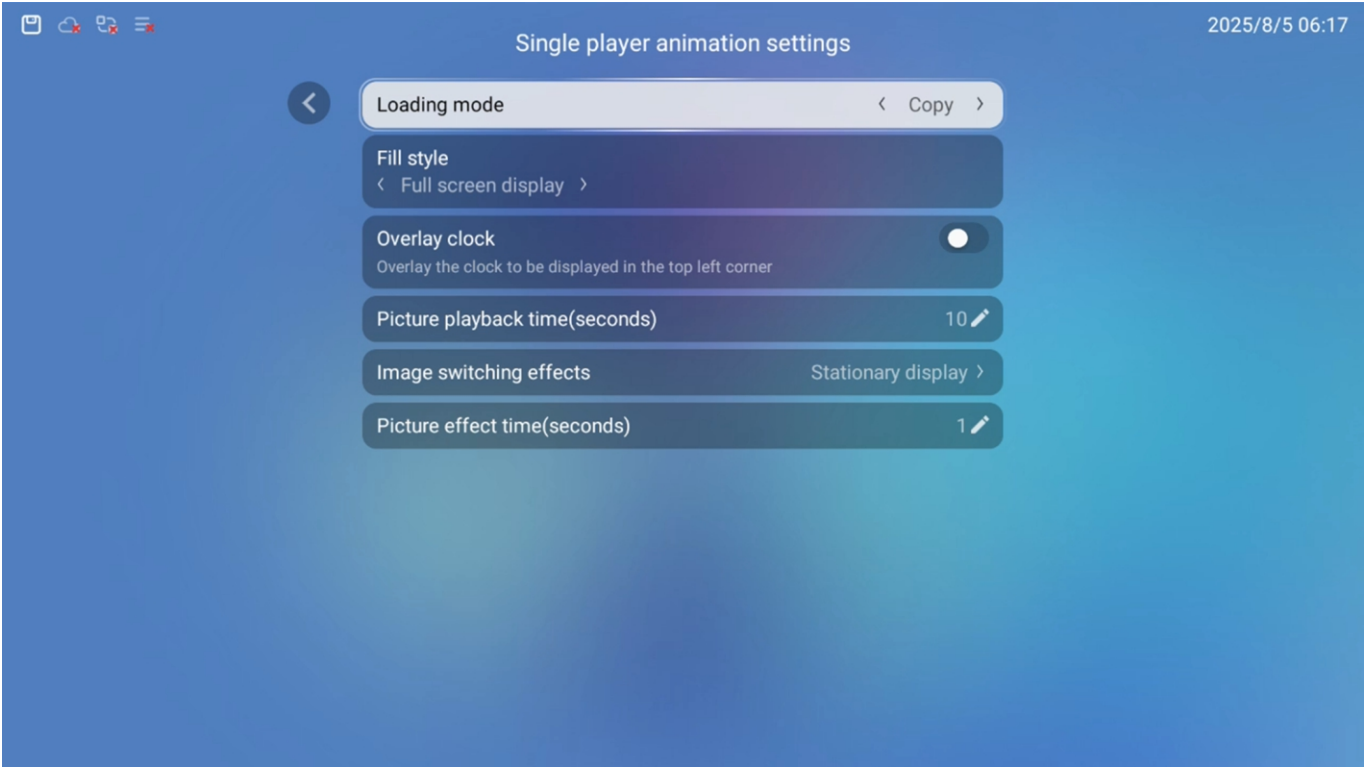

Device screenshot

Enter "System Settings" interface.
Adjust "System mode" to "Stand-alone" .
Adjust "Loading mode" to "Copy".
Put the content you need to play in a USB flash drive.

Tips: You can simply put the content directly into the USB flash drive without storing it in any folders.
USB Driver should be FAT32 format.
Once you insert the USB drive into the device , the content will be automatically copied to the device and played.
Remove the USB stick , it will not affect playback.

 


**View the video instructions
onYouTube**


Mobile Phone Content Publishment

Connect the Device


Connect the device to the same WIFI as your phone has connected For the mouse:
Click on "  " to enter the settings
For the remote control: Press the "  " button to enter the settings
If there ' s no Wi-Fi, you can connect to the device ' s hotspot to publish.
Notice: WIFI and Hotspot can't be turned on in same time.

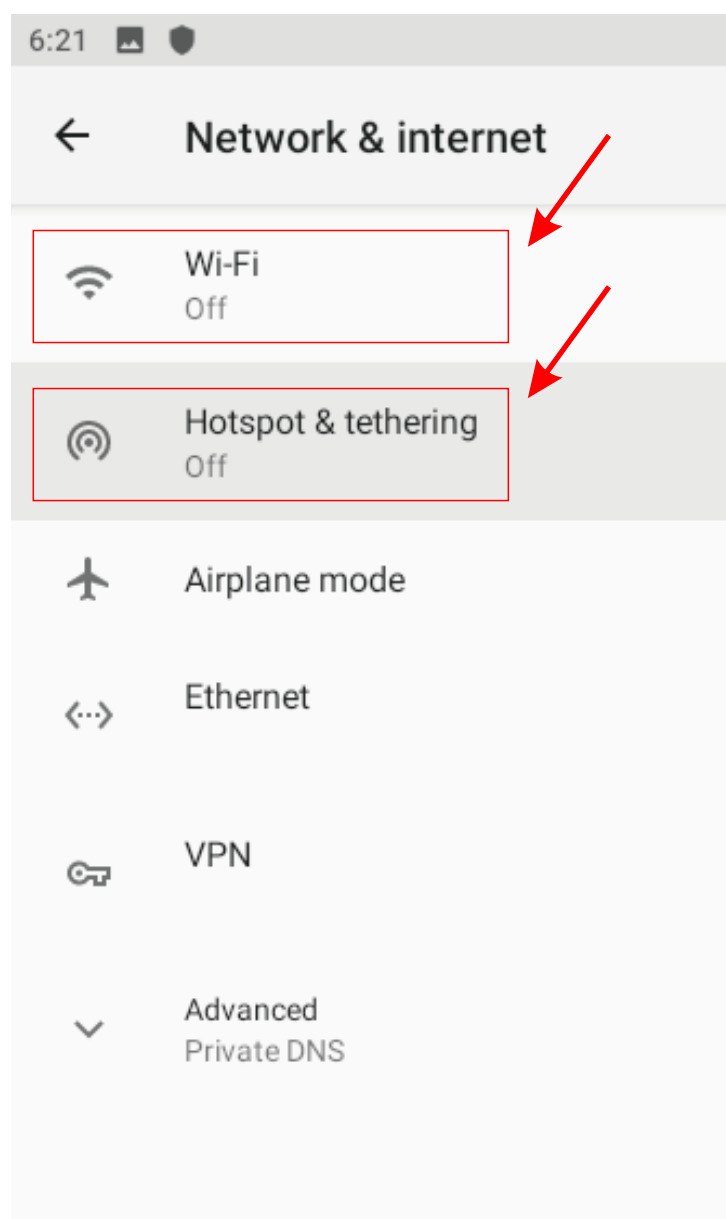

Device screenshot

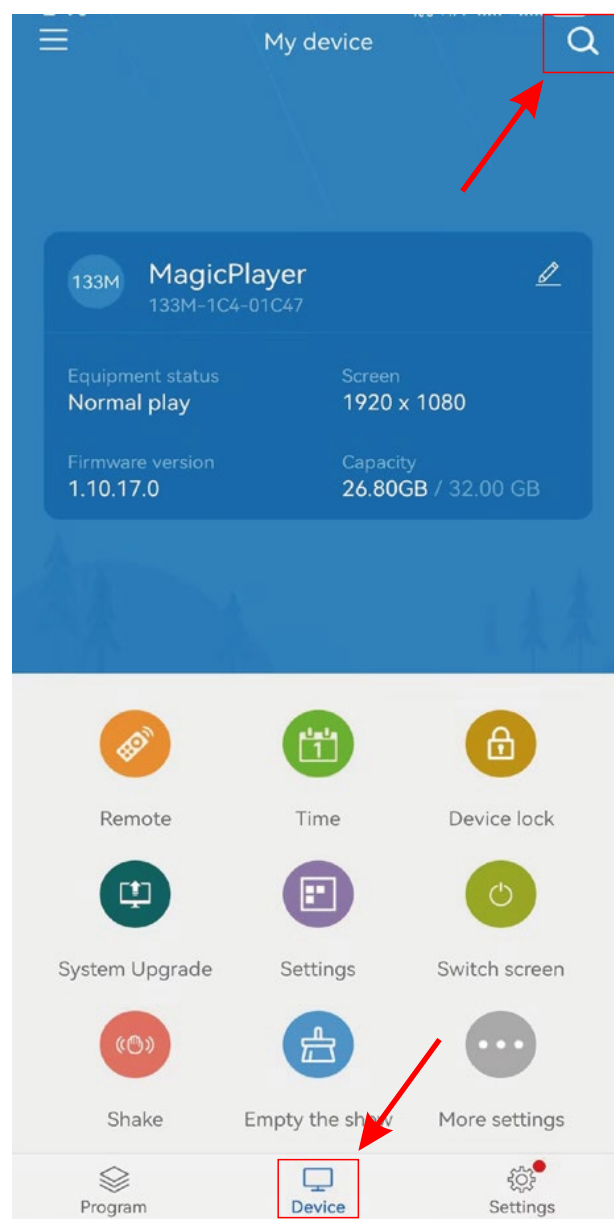 


Phone screenshot

 Download Ledart app  from app store

Tap the **【Device】** icon, Select the **【Find Device】**

The device will appear in the list once connected

 Create Content

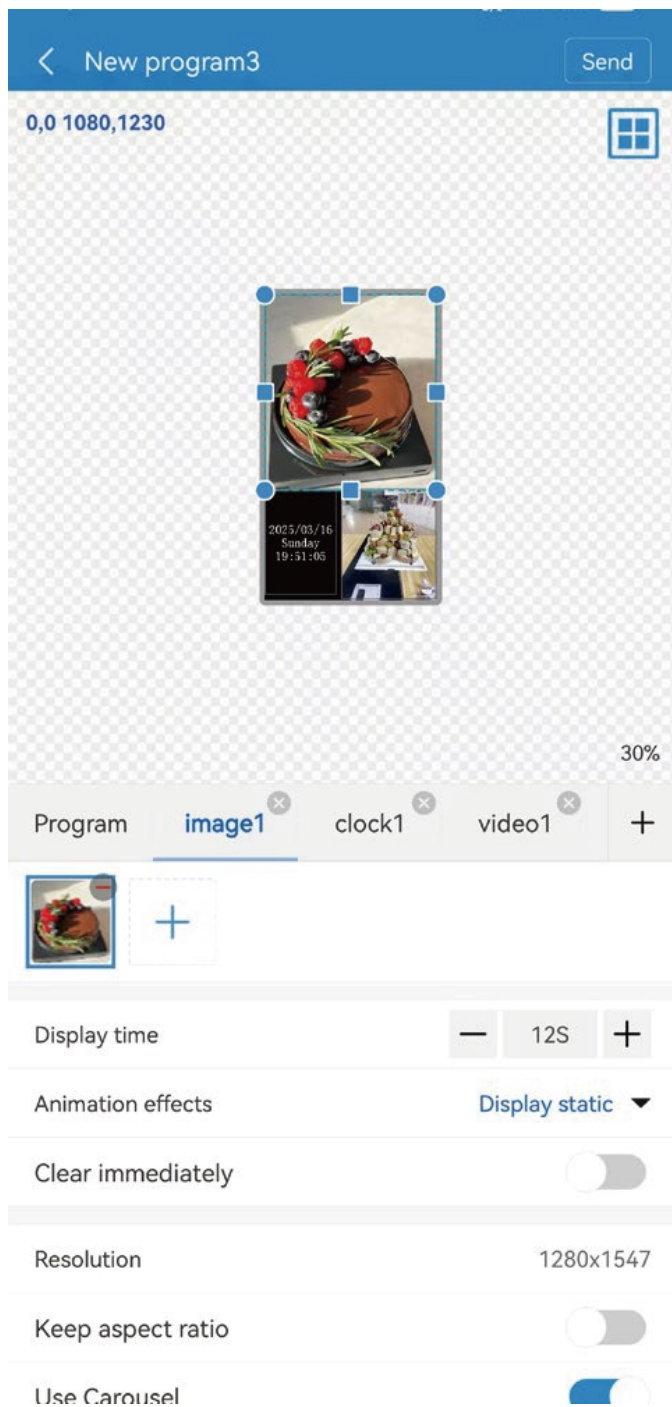

Phone screenshot



**View the video instructions
on YouTube**

On the **【Program】** page, select **【New program】**

Choose media files(images/videos/Web)

Set display duration for each file individually

Adjust the aspect ratio freely for optimal display

After editing the content , click " send " to publish it to the device

Upload speed varies based on file size and network stability

PC Content Publishemnt

I.Register an Account

Use a computer and access the cloud management platform through a browser at: www.led-cloud.com. (It is recommended to keep the username as short as possible because you need to input it in the next step)

Register Account

[Back to Login](#)

* User Name

4-20 characters, beginning with a letter, cannot contain special characters

* Password

Must contain uppercase and lowercase letters and numbers

* Confirm Password

Please re-enter the password

* Company Name

Please enter the company or team name

Mobile Number

Please enter the associated mobile number

* Email

Please fill in the correct Email address

* Verification Code

Verification Code

* Get Verification Code

Verification Code

Get
Captcha

☐ I Agree"Terms of Service and Privacy Policy"

Register

 
PC screenshot

2. Connect the Digital Signage Display to the Internet


Wired Connection / Wi-Fi Connection:
Press the "≡" button on the remote control or left-click 3-4 times in the upper right corner with the mouse to enter the system settings.

Select "Network Settings" and choose a wireless network to connect to .
(For a wired connection, select "Wired Network.")

Change the system mode to "Networking" mode, enter the server address and user name (you have registered in www.led-cloud.com), and click "Save."

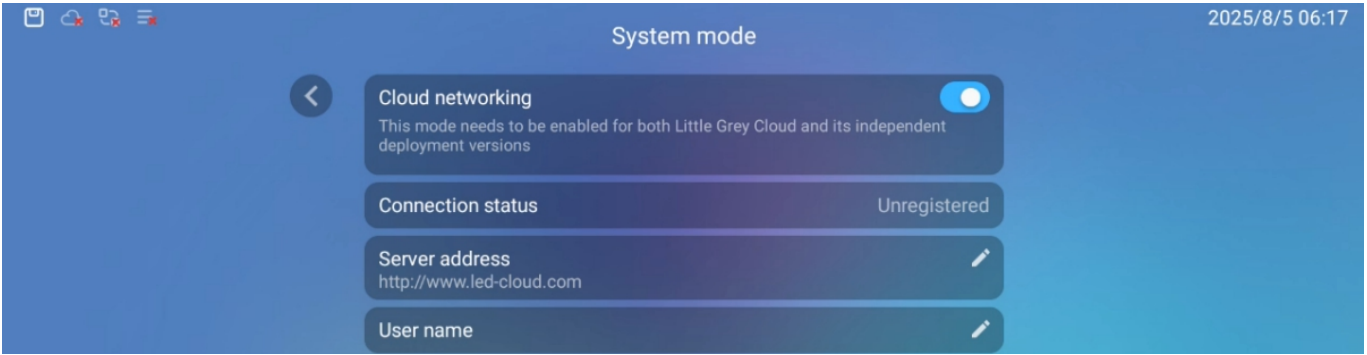


Device screenshot

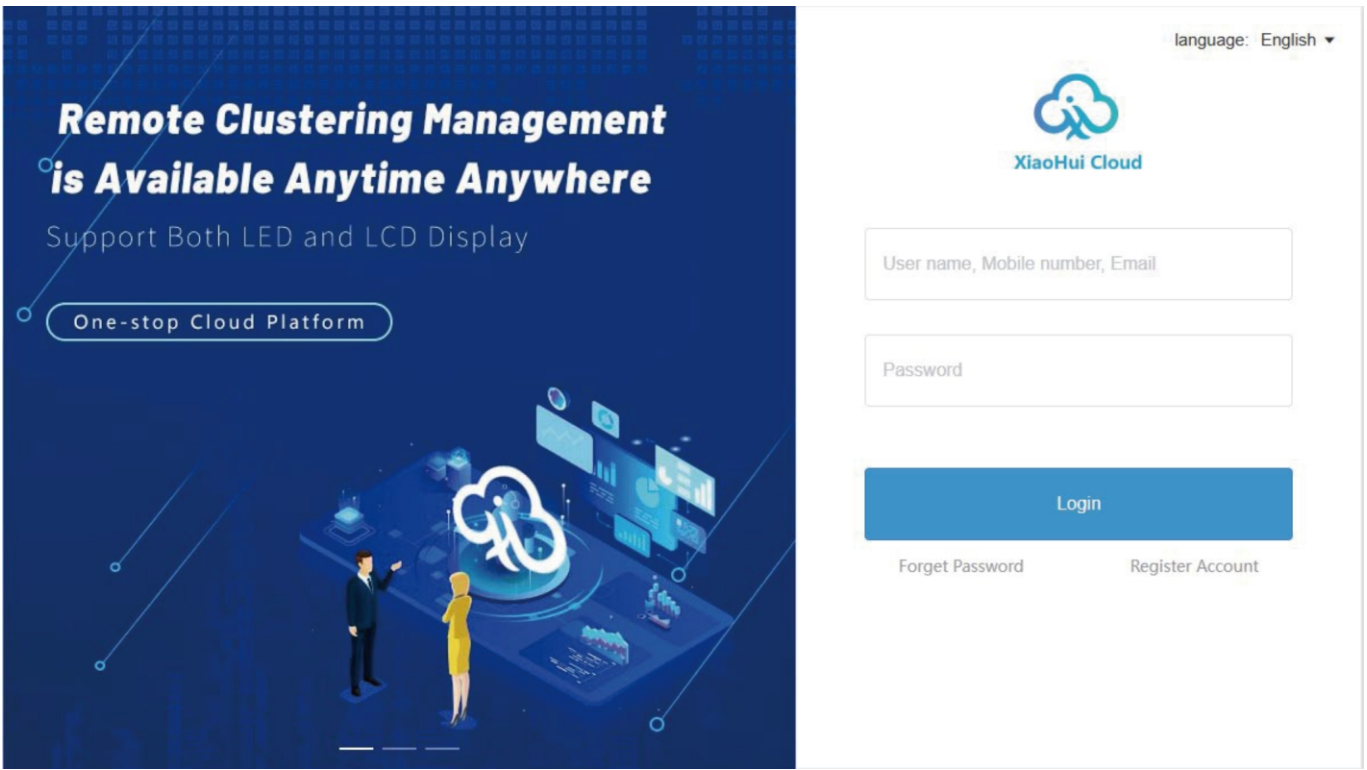 

PC screenshot

3. How to Create content

 
Click [Program] to enter the program list.
Click [New Program] to create a program:

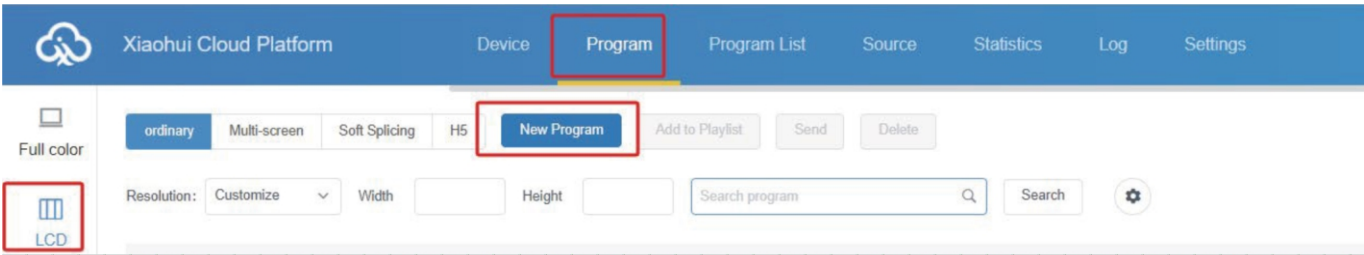

PC screenshot


Define the program name.

 Set the screen width and height or select the corresponding device to automatically read the screen dimensions.
Click "OK. "

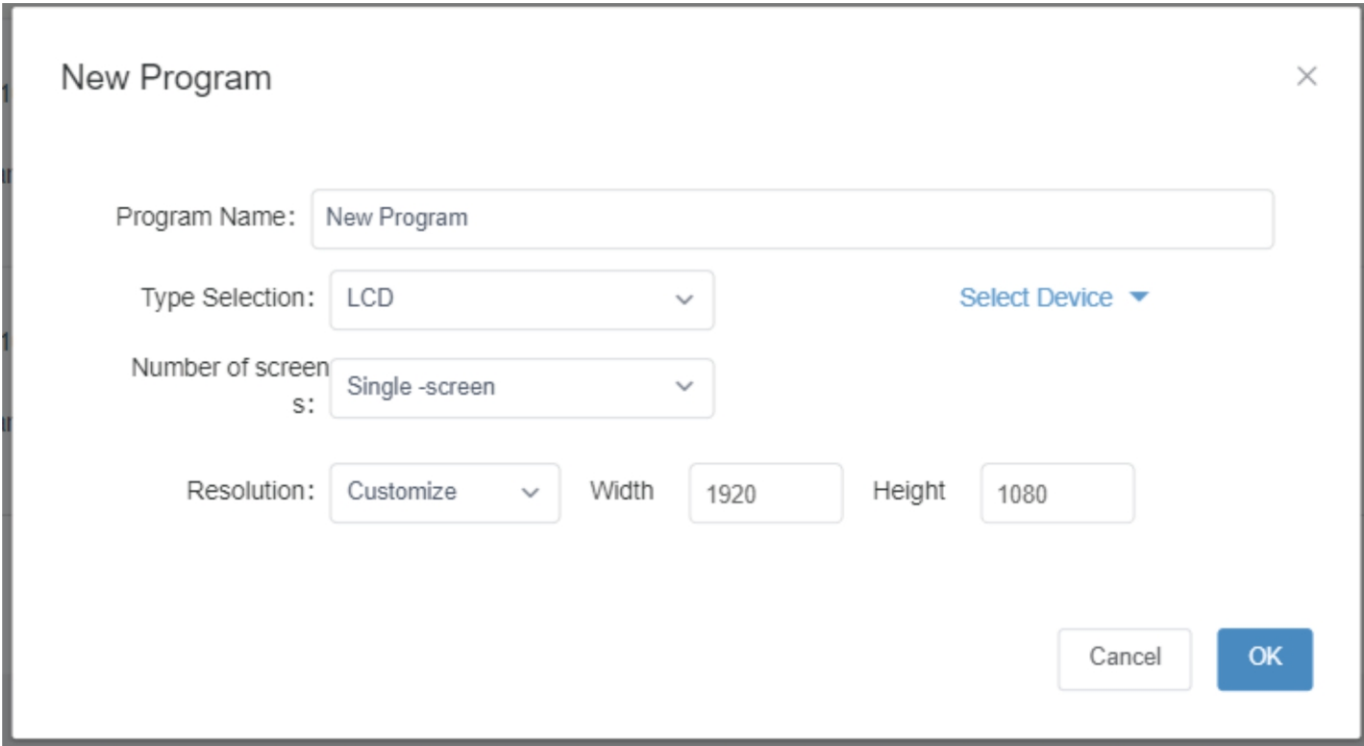

PC screenshot

 Edit Program
On the program editing page:

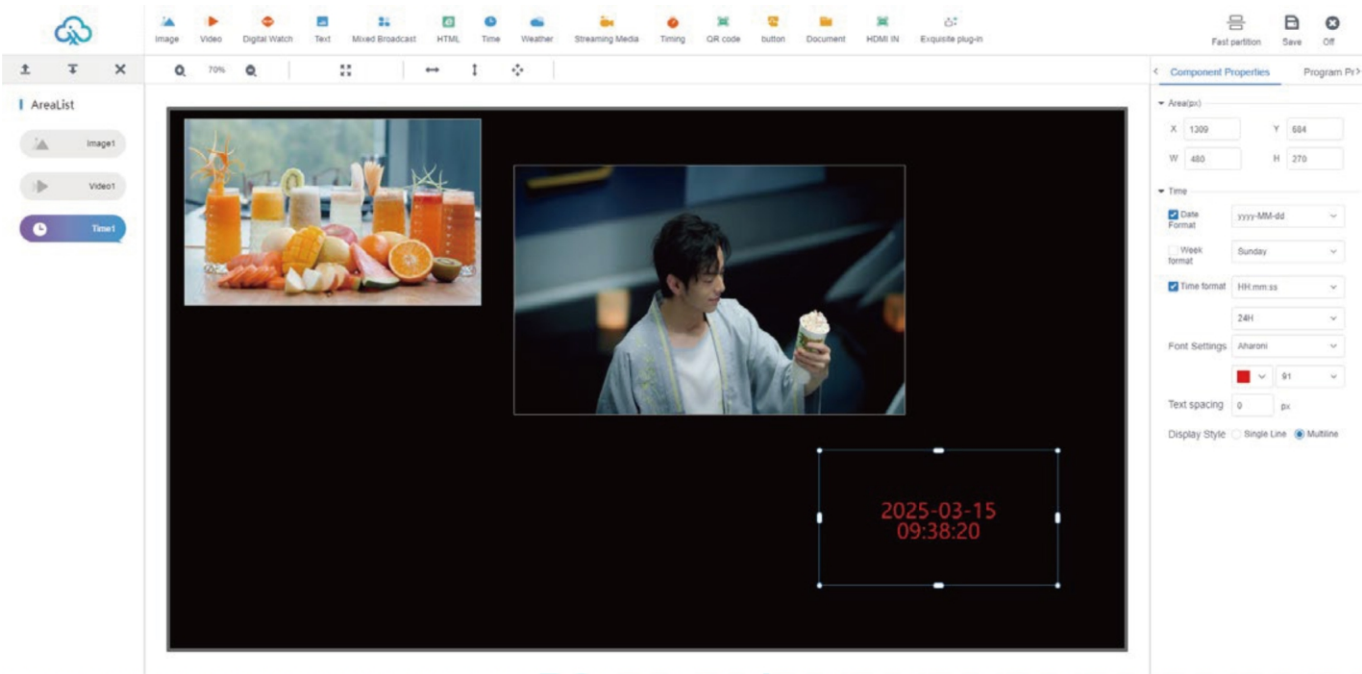

PC screenshot

- 1. Add multiple areas with pictures, videos, text, etc.
- 2. Adjust areas by stretching them horizontally, vertically, or maximizing them to full screen.
- 3. Alternatively, set the area X/Y coordinates and dimensions.
- 4. Click the "+" button to select the desired media type.
- 5. Modify parameters such as effect type, effect time, and stop time.

Supported Formats:

Images: GIF, JPG, JPEG, PNG, BMP, TIFF, PBM, PGM, PPM, XBM, XPM.

 
Videos: 3GP, AVI, FLV, MP4, M3U8, MPG, ASF, WMV, MKV, MOV, TS, WebM, MXF.

Video Encoding: H.264/AVC, H.263, H.263+, H.265, MPEG-I, MPEG-2, MPEG-4, MJPEG, VP8, VP9, Quicktime, RealVideo, Windows Media Video.

Audio Encoding: AAC, ADPCM, AMR, DSD, MPI, MP2, MP3, PCM, RealAudio, Windows Media Audio.

Additional Features:

After adding media areas, you can rearrange or delete them.
Layering is supported: the topmost item appears in front. For example, a video can be displayed over a picture, with a digital clock on top.

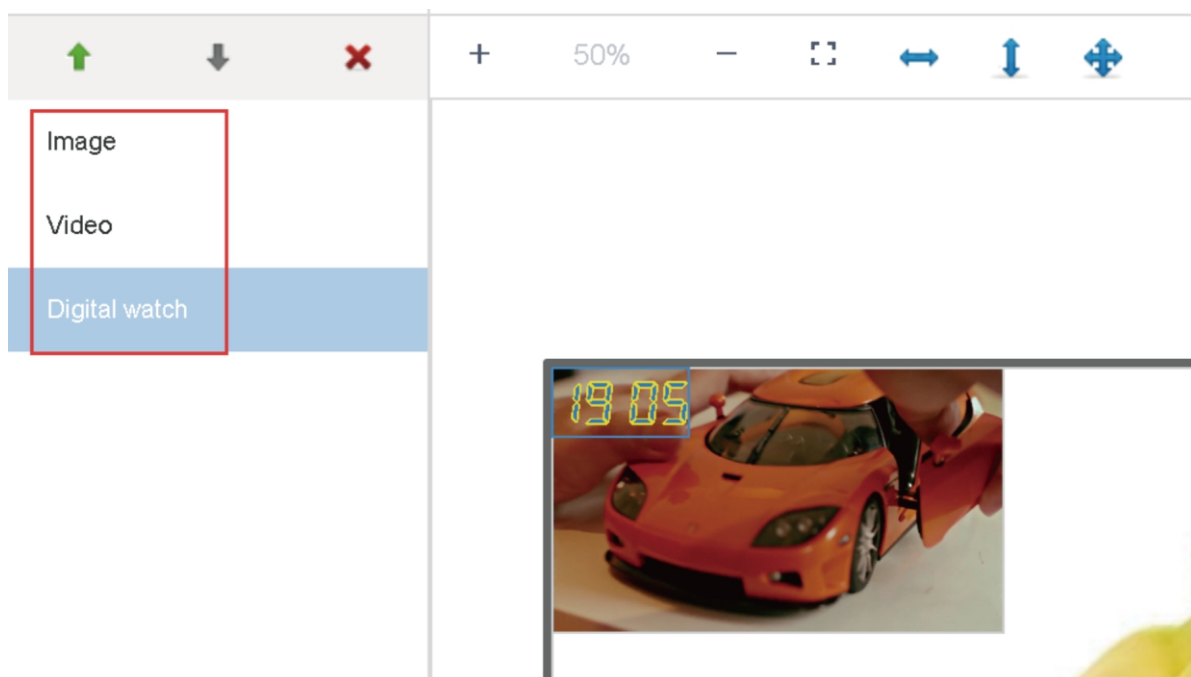


PC screenshot

After editing, click the "Save" button in the upper right corner.


4. How to Publish content

 Close the editor to return to the program list.

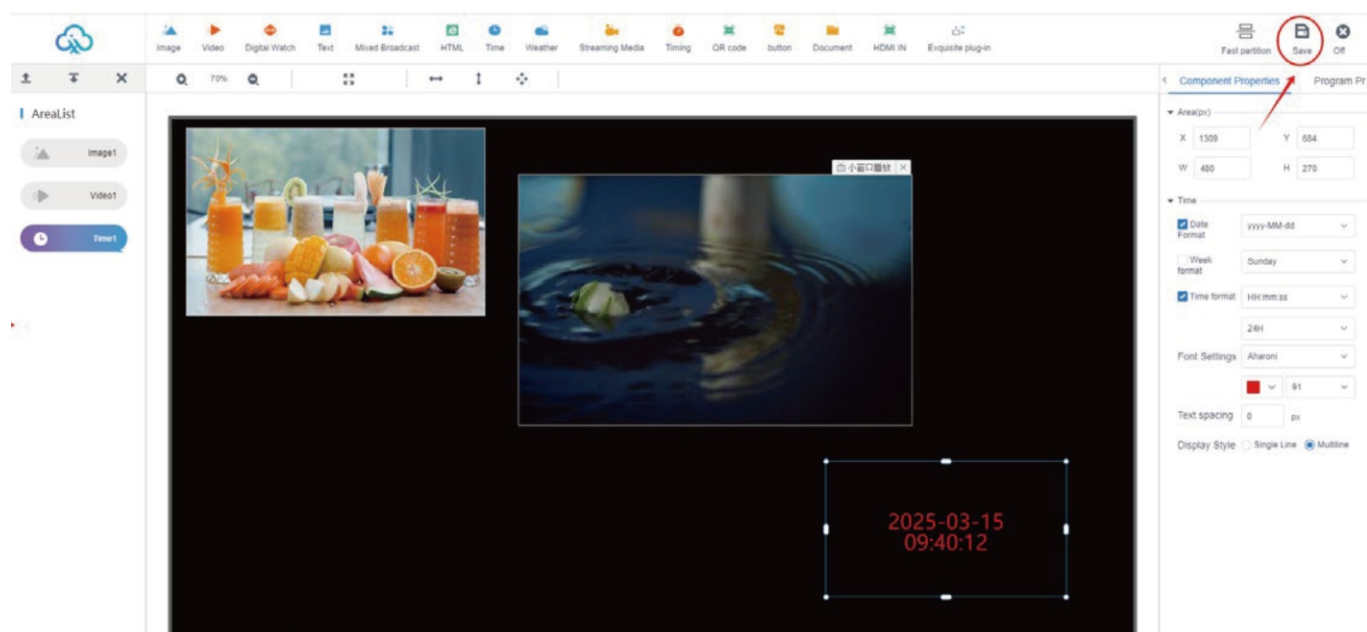

PC screenshot

 Locate the desired program by name or ID and click "Send".
you can select the device or device group.

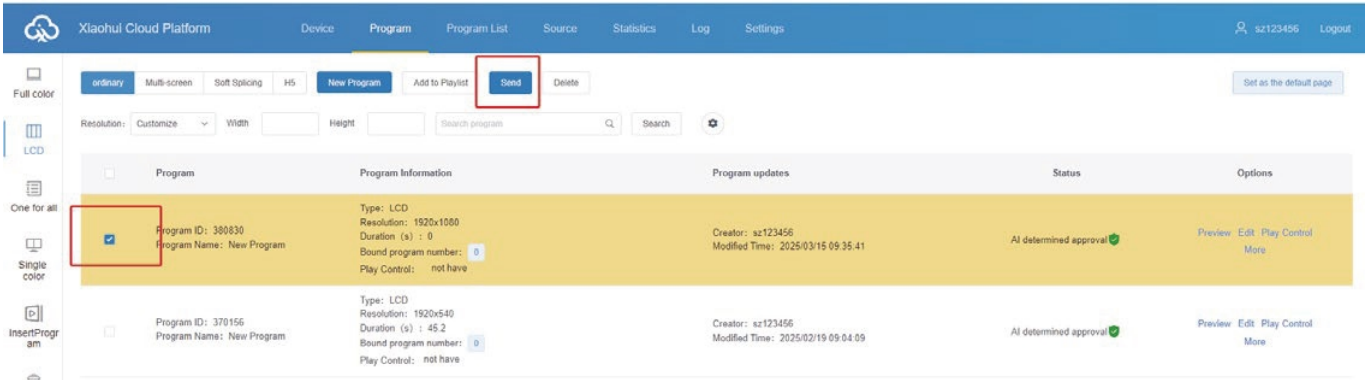

PC screenshot

Check the sending status in the task list.
You can also view task records in the device list or release history.

 


Download the complete
operation PDF file




View the video instructions
on YouTube


Product Catalog

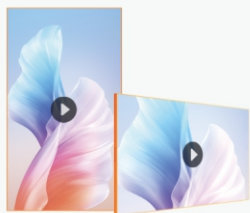

Wall mount

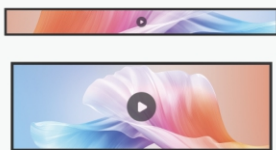 

Bar Display

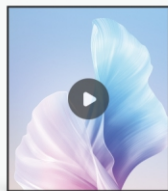 

Square Display



 
Digital Poster Kiosk




Indoor Digital A-Board



Retail Desktop Digital Signage

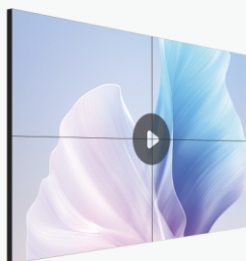

Videl Wall

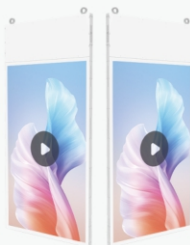 

Window-Facing Display



Shelf Edge/ Top Display



LCD Information Kiosk



Outdoor Double Side Digital A-Board



Floor standing Kiosk

Canlarriz

For 13 years,
Canlarriz has redefined digital signage
through relentless innovation,
Combining minimalist design with cutting-edge technology.

From indoor displays to outdoor solutions,
Every product is self-developed by our team.



Our mission

Innovative displays driving worldwide business growth